

This manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is resold.

This publication includes the latest production information available before printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

The vehicle pictured in this owner's manual may not match your actual vehicle.

For any query or assistance, please call Customer care number:
1800 103 3434 (Toll free)

Welcome 歡迎

Congratulations on your purchase of a new Honda vehicle. Your selection of a Honda makes you part of a worldwide family of satisfied customers who appreciate Honda's reputation for building quality into every product.

To ensure your safety and riding pleasure:

- Read this owner's manual carefully.
- Follow all recommendations and procedures contained in this manual.
- Pay close attention to safety messages contained in this manual and on the vehicle.

- The following codes in this manual indicate the country.
- The illustrations here in are based on the CB350DS II ID type.

Country Codes

Code	Country
------	---------

CB350D

ID	India
----	-------

CB350DS

ID, II ID	India
-----------	-------


A Few Words About Safety 關於安全的幾句話

Your safety, and the safety of others, is very important. Operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on safety labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a vehicle. You must use your own good judgement.

You will find important safety information in a variety of forms, including:

- Safety labels on the vehicle
- Safety Messages preceded by a safety alert symbol  and one of three signal words: DANGER, WARNING, or CAUTION.

These signal words mean:

DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION

You **CAN** be **HURT** if you don't follow instructions.

Other important information is provided under the following titles:

NOTICE Information to help you avoid damage to your vehicle, other property, or the environment.

車輛安全	Vehicle Safety	P. 2
操作指南	Operation Guide	P. 16
維護	Maintenance	P. 47
故障排除	Troubleshooting	P. 87
信息	Information	P. 105
規格	Specifications	P. 117
保固政策	Warranty Policy	P. 120
指數	Index	P. 128

Vehicle Safety 車輛安全

This section contains important information for safe riding of your vehicle.
Please read this section carefully.

Safety Guidelines	安全須知	P. 3
Image Labels	圖片標籤	P. 6
Safety Precautions	安全須知	P. 8
Riding Precautions	騎車注意事項	P. 9
Accessories & Modifications	配件和修改	P. 14
Loading		P. 15

Safety Guidelines 安全須知

Follow these guidelines to enhance your safety:

- Perform all routine and regular inspections specified in this manual.
- Stop the engine and keep sparks and flame away before filling the fuel tank.
- Do not run the engine in enclosed or partly enclosed areas. Carbon monoxide in exhaust gases is toxic and can kill you.

Always Wear a Helmet 始終戴安全帽

It's a proven fact: helmets and protective apparel significantly reduce the number and severity of head and other injuries. So always wear an approved helmet and protective apparel. 📖P. 8

Before Riding 騎行之前

Make sure that you are physically fit, mentally focused and free of alcohol and drugs. Check

that you and your passenger are both wearing an approved helmet and protective apparel. Instruct your passenger on holding onto the rear grip or your waist, leaning with you in turns, and keeping their feet on the footpegs, even when the vehicle is stopped.

Take Time to Learn & Practice

花時間學習和練習

Even if you have ridden other vehicles, practice riding in a safe area to become familiar with how this vehicle works and handles, and to become accustomed to the vehicle's size and weight.

Ride Defensively 防衛性駕駛

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

Safety Guidelines

Make Yourself Easy to See

讓自己容易看清

Make yourself more visible, especially at night, by wearing bright reflective clothing, positioning yourself so other drivers can see you, signaling before turning or changing lanes, and using your horn when necessary.

Ride within Your Limits

在極限範圍內騎行

Never ride beyond your personal abilities or faster than conditions warrant. Fatigue and inattention can impair your ability to use good judgement and ride safely.

Don't Drink or Use Drugs and Ride

不要喝酒或使用毒品而騎車

Alcohol or drugs and riding don't mix. Even one alcoholic drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. The same is true for drug use. Don't drink or use and ride, and don't let your friends do it either.

Keep Your Honda in Safe Condition

保持本田安全

It's important to keep your vehicle properly maintained and in safe riding condition. Inspect your vehicle before every ride and perform all recommended maintenance. Never exceed load limits (➤P. 15), and do not modify your vehicle or install accessories that would make your vehicle unsafe (➤P. 14).

If You are Involved in a Crash

如果您捲入崩潰

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

If you decide to continue riding, first turn the ignition switch to the OFF position, and evaluate the condition of your vehicle. Inspect for fluid

leaks, check the tightness of critical nuts and bolts, and check the handlebar, control levers, brakes, and wheels. Ride slowly and cautiously. Your vehicle may have suffered damage that is not immediately apparent. Have your vehicle thoroughly checked at a qualified service facility as soon as possible.

Carbon Monoxide Hazard

一氧化碳危害

Exhaust contains poisonous carbon monoxide, a colourless, odorless gas. Breathing carbon monoxide can cause loss of consciousness and may lead to death.

If you run the engine in confined or even partly enclosed area, the air you breathe could contain a dangerous amount of carbon monoxide.

Never run your vehicle inside a garage or other enclosure.

WARNING

Running the engine of your vehicle while in an enclosed or even partially enclosed area can cause a rapid build-up of toxic carbon monoxide gas.

Breathing this colourless, odorless gas can quickly cause unconsciousness and lead to death.

Only run your vehicle's engine when it is located in a well ventilated area outdoors.

Image Labels

Image Labels 圖片標籤

The following pages describe the label meanings. Some labels warn you of potential hazards that could cause serious injury. Others provide important safety information. Read this information carefully and don't remove the labels.

If a label comes off or becomes hard to read, contact your dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.



Read instructions contained in Owner's Manual carefully.



Read instructions contained in Shop Manual carefully. In the interest of safety, take the vehicle to be serviced only by your dealer.



DANGER (with RED background)

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING (with ORANGE background)

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION (with YELLOW background)

You **CAN** be **HURT** if you don't follow instructions.

BATTERY LABEL DANGER 電池標籤危險



- Keep flame and spark away from the battery. Battery produce explosive gas that can cause explosion.
- Wear the eye protection and rubber gloves when handling the battery, or you can get burned or lose your eyesight by the battery electrolyte.
- Do not allow children and other people to touch a battery unless they understand proper handling and hazards of the battery very well.
- Handle the battery electrolyte with extreme care as it contains dilute sulfuric acid. Contact with your skin or eyes can burn you or cause loss of your eyesight.
- Read this manual carefully and understand it before handling the battery. Neglect of the instructions can cause personal injury and damage to the vehicle.
- Do not use a battery with the electrolyte at or below the lower level mark. It can explode causing serious injury.

Safety Precautions

Safety Precautions 安全須知

- Ride cautiously and keep your hands on the handlebar and feet on the footpegs.
- Keep passenger's hands onto the rear grip or your waist, passenger's feet on the footpegs while riding.
- Always consider the safety of your passenger, as well as other drivers and riders.

Protective Apparel 防護服

Make sure that you and any passenger are wearing an approved helmet, eye protection, and high-visibility protective clothing. Be sure to avoid loose clothes that could get caught on any part of your vehicle. Ride defensively in response to weather and road conditions.

I **Helmet** 安全帽

Safety-standard certified, high-visibility, correct size for your head

- Must fit comfortably but securely, with the chin strap fastened.

- Face shield with unobstructed field of vision or other approved eye protection

WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Make sure that you and any passenger always wear an approved helmet and protective apparel.

I **Gloves** 手套

Full-finger leather gloves with high abrasion resistance

I **Boots or Riding Shoes** 靴子或軍靴

Sturdy boots with non-slip soles and ankle protection

I **Jacket and Trousers** 外套和長褲

Protective, highly visible, long-sleeved jacket and durable trousers for riding (or a protective suit)

Riding Precautions 乘坐注意事項

Running-in Period 磨合期

前500公里

During the first 500 km (300 miles) of running, follow these guidelines to ensure your vehicle's future reliability and performance.

- Avoid full-throttle starts and rapid acceleration. 避免全油門啟動和快速加速
- Avoid hard braking and rapid down-shifts.
- Ride conservatively. 避免急剎車和快速降檔

Brakes 煞車

Observe the following guidelines:

- Avoid excessively hard braking and down-shifting.
 - ▶ Sudden braking can reduce the vehicle's stability.
 - ▶ Where possible, reduce speed before turning; otherwise you risk sliding out.
- Exercise caution on low traction surfaces.
 - ▶ The tyres slip more easily on such surfaces, and braking distances are longer.

- Avoid continuous braking.
 - ▶ Repeated braking, such as when descending long, steep slopes can seriously overheat the brakes, reducing their effectiveness. Use engine braking with intermittent use of the brakes to reduce speed.
- For full braking effectiveness, operate both the front and rear brakes together.

Riding Precautions

I Anti-lock Brake System (ABS)

防鎖死煞車系統

This model equipped with an Anti-lock Brake System (ABS) designed to help prevent the brakes from locking up during hard braking.

- ABS does not reduce braking distance. In certain circumstances, ABS may result in a longer stopping distance.
- ABS does not function at speeds below 5 km/h (3 mph).
- The brake lever and pedal may recoil slightly when applying the brakes. This is normal
- Always use the recommended front/rear tyres and sprockets to ensure correct ABS operation.

I Engine Braking

引擎煞車

Engine braking helps slow your vehicle down when you release the throttle. For further slowing action, downshift to a lower gear. Use engine braking with intermittent use of the brakes to reduce speed when descending long, steep slopes.

I Wet or Rainy Conditions

潮濕或多雨的條件

Road surfaces are slippery when wet, and wet brakes further reduce braking efficiency. Exercise extra caution when braking in wet conditions.

If the brakes get wet, apply the brakes while riding at low speed to help them dry.

Parking 停車處

- Park on a firm, level surface.
- If you must park on a slight incline or loose surface, park so that the vehicle cannot move or fall over.
- Make sure that high-temperature parts cannot come into contact with flammable materials.
- Do not touch the engine, muffler, brakes and other high-temperature parts until they cool down.
- To reduce the likelihood of theft, always lock the handlebar and remove the key when leaving the vehicle unattended.
Use of an anti-theft device is also recommended.

I Parking with the Side Stand or Centre Stand

用側架或中央架停車

1. Stop the engine.**2. Using the side stand**

Push the side stand down.

Slowly lean the vehicle to the left until its weight rests on the side stand.

Turn the handlebar fully to the left.


Riding Precautions

Using the centre stand 使用中柱

To lower the centre stand, stand on the left side of the vehicle.

Hold the left handle grip and the rear grip. Press down on the tip of the centre stand with your right foot and, simultaneously, pull up and back.

Turn the handlebar fully to the left.

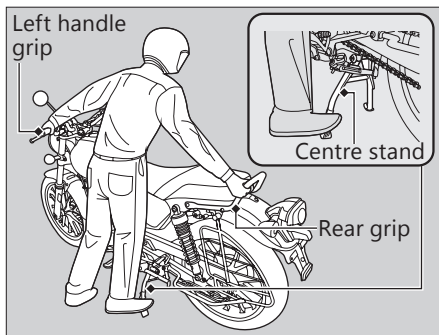

3. Turn the ignition switch to the LOCK position and remove the key. ➤P. 34

Refuelling and Fuel Guidelines

加油和加油指南

Follow these guidelines to protect the engine, fuel system and catalytic converter:

- Use only unleaded petrol.
- Use recommended octane number. Using lower octane petrol will result in decreased engine performance.
- Do not use fuels containing a high concentration of alcohol. ➤P. 115
- Do not use stale or contaminated petrol or an oil/petrol mixture.
- Avoid getting dirt or water in the fuel tank.

Honda selectable torque control (HSTC) 本出循跡防滑

When the Honda selectable torque control (Torque Control) detects rear wheel spin during acceleration, the system will limit the amount of torque applied to the rear wheel.

Torque Control does not work during deceleration and will not prevent the rear wheel from skidding due to engine braking. Do not close the throttle suddenly, especially when riding on slippery surfaces.

Torque Control may not compensate for rough road conditions or rapid throttle operation. Always consider road and weather conditions, as well as your skills and condition, when applying throttle.

If your motorcycle gets stuck in mud, snow or sand, it may be easier to free it by turning off the Torque Control temporarily.

Temporarily turning off Torque Control also may help you maintain control and balance when riding on off-road terrain.

Always use the recommended tyres and sprockets to ensure correct Torque Control operation.

Accessories & Modifications 配件和修改

We strongly advise that you do not add any accessories that were not specifically designed for your vehicle by Honda or make modifications to your vehicle from its original design. Doing so can make it unsafe.

Modifying your vehicle may also void your warranty and make your vehicle illegal to operate on public roads. Before deciding to install accessories on your vehicle be certain the modification is safe and legal.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Do not pull a trailer with, or attach a sidecar to, your vehicle. Your vehicle was not designed for these attachments, and their use can seriously impair your vehicle's handling.

Loading 載重


- Carrying extra weight affects your vehicle's handling, braking and stability.
Always ride at a safe speed for the load you are carrying.
- Avoid carrying an excessive load and keep within specified load limits.
Maximum weight capacity ➤ P. 117
- Tie all luggage securely, evenly balanced and close to the centre of the vehicle.
- Do not place objects near the lights or the muffler.


WARNING

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.


Follow all load limits and other loading guidelines in this manual.

Parts Location 零件位置

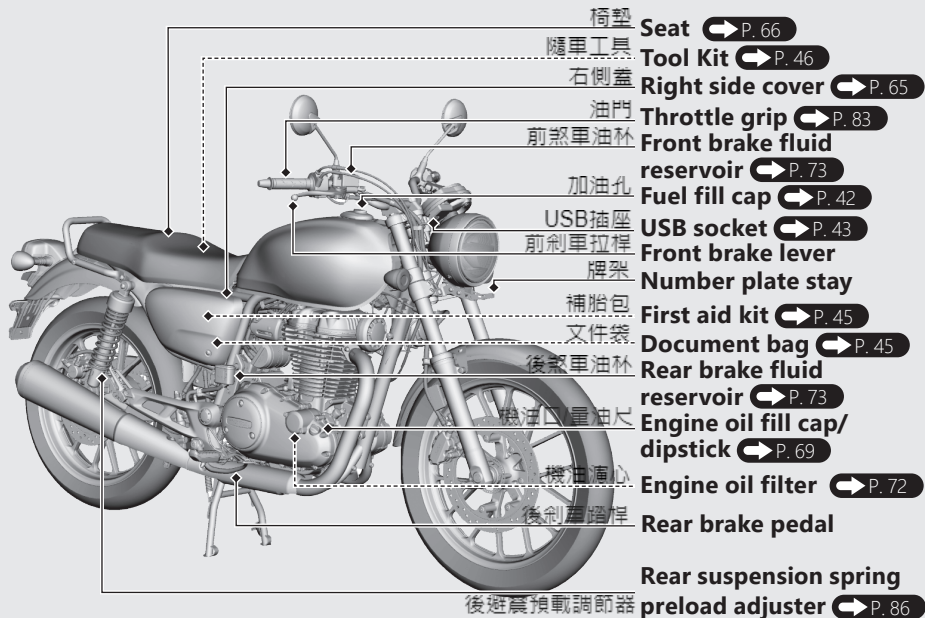

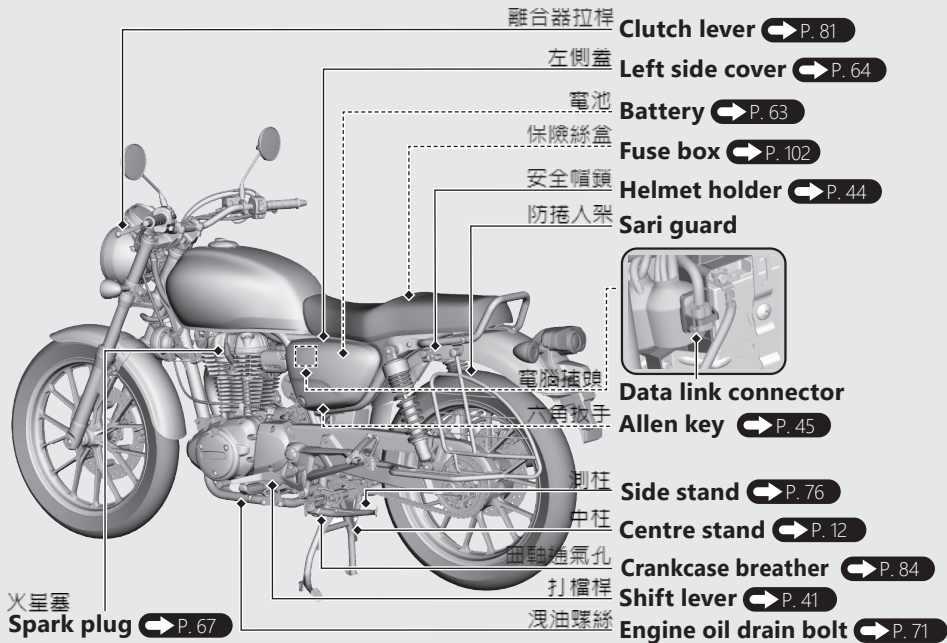


Instruments 儀表

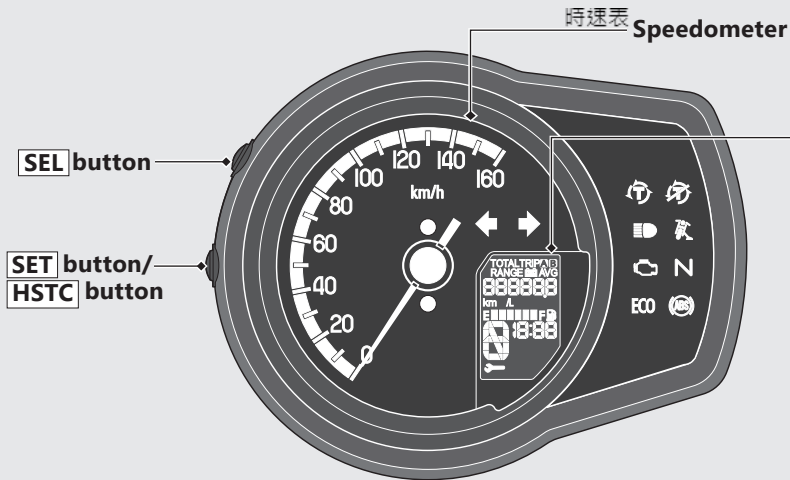


Display Check 顯示檢查

When the ignition switch is turned to the ON position, all the mode and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.

里程表[TOTAL]/里程表[TRIP A / B]
Odometer [TOTAL]/ Tripmeter [TRIP A/B]/ Current Fuel Millage/ Average Fuel Millage [AVG]/ Available driving distance [RANGE] and Battery voltage [V]  P. 20


可用行駛距離[RANGE]和電池電壓[V]

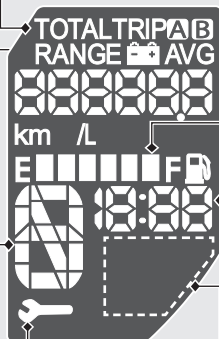

油表 **Fuel gauge**

Remaining fuel when only 1st (E) segment starts flashing: approximately 1.5 litres (0.40 US gal, 0.33 Imp gal)




If the fuel gauge indicator flashes in a repeat pattern or turns off:  P. 91

時鐘

Clock (12-hour display)

To set the clock  P. 24

維修燈

SERVICE DUE indicator  P. 28


檔位顯示器

Gear position indicator

This shows 1st to 5th gear position. "-" appears when not shifted properly

CB350DS ID/ II ID




Honda Smartphone Voice Control system (HSVCS) area  P. 35

Display the status of Honda Smartphone Voice Control system (HSVCS)

Instruments (Continued) 儀表

里程表[TOTAL]/ 里程表[TRIP A / B] 當前燃油里程/平均燃油里程[AVG]
Odometer [TOTAL]/ Tripmeter [TRIP A/B]/ Current fuel mileage/ Average fuel mileage [AVG]/ Available driving distance [RANGE]/ Battery voltage [V]

The **[SEL]** button selects the odometer, tripmeter A, tripmeter B, current fuel mileage, average fuel mileage, available driving distance and battery voltage.

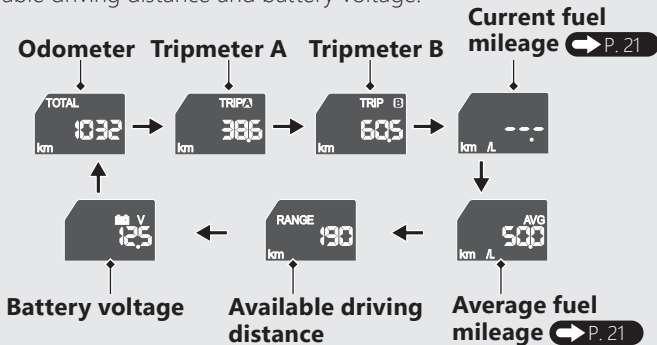

CB350DS ID/ II ID

You can select the odometer, tripmeter A/B, current fuel mileage, average fuel mileage, available driving distance, battery voltage by press **▲** up switch or **▼** down Switch on the left handlebar **➡ P. 22**

- **Odometer [TOTAL]** : Total distance ridden.

- 里程表[TRIP A / B] 自複位行程計以來的行駛距離
 - **Tripmeter [TRIP A/B]** : Distance ridden since tripmeter was reset.  P. 23
- **Current fuel mileage** : 當前燃油里程

Displays instant fuel mileage. If your speed is less than 5±2 km/h or immediately after ignition switch is turned to ON, "--.-" is displayed.

When "--.-" is displayed on other cases, go to your dealer for service.
- **Average fuel mileage [AVG]** : 平均燃油里程[AVG]

Displays average fuel mileage since the tripmeter A was reset.

It displays "--.-" after resetting tripmeter. When "--.-" is displayed in other cases, go to your dealer for service.
- **Available driving distance [RANGE]** : 可用行駛距離[RANGE]

Displays the estimated distance you can travel on remaining fuel.

Available driving distance is displayed from full fuel and displayed between [999 km] and [0 km]. The indicated available driving distance is calculated based on the driving conditions, and the indicated figure may not always be the actual available distance.

When the calculated distance is below 5 km (3 mile) or the amount of remaining fuel is below 1.0 L (0.26 US gal, 0.22 Imp gal): " --- " is displayed.

When "---" is displayed except for the above-mentioned cases, go to your dealer for service.
- **Battery voltage [V]** : 電池電壓[V] : Current battery voltage.


Instruments *(Continued)*

Basic Operations

CB350DS ID/ II ID

You can operate and set the various functions of the display using the switches on the left handlebar.

However, you cannot operate some functions while the vehicle in motion.

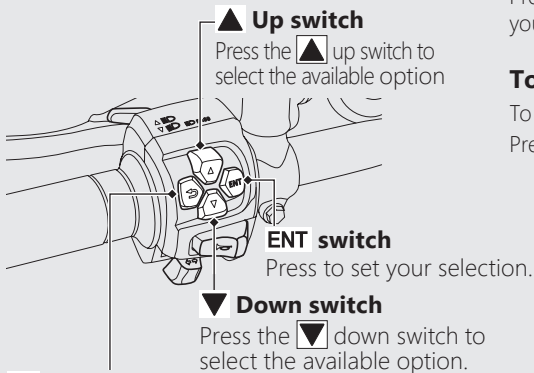

↶ Back switch

Press the ↶ back switch to return to the previous option.

To Select a Desired Setting Option

You can select your desired setting option to operate with the ▲ up switch or ▼ down switch on the left handlebar.

To Set Your Selection

Press the ENT switch on left handlebar to set your selection.

To Exit the Setting Option

To return the pervious option:

Press the ↶ back switch on the left handlebar.

重置里程表 當前燃油里程
平均燃油里程和可用行駛距離


1 To reset the tripmeter, current fuel mileage, average fuel mileage and available driving distance

- 1 To reset tripmeter A, current fuel mileage, average fuel mileage and available driving distance together, press and hold **SEL** button with tripmeter A displayed.

Or

CB350DS ID/ II ID

Press and hold the  up switch to reset the tripmeter A.

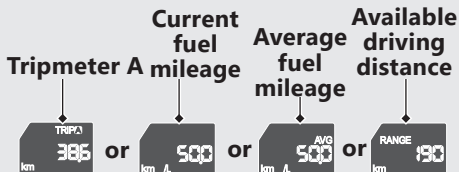

- 2 When they are reset, "0.0" is displayed at each indication.




- 3 Then, the display returns to the last selected indication.




- 4 To reset tripmeter B, Press and hold **SEL** button with tripmeter B displayed.

Or

CB350DS ID/ II ID

To reset tripmeter B, Press and hold the  up switch with tripmeter B displayed.

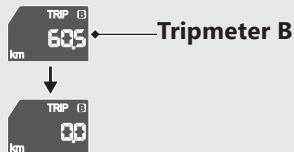

Instruments (Continued)

2 Clock Setting: 時鐘調整

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold the **SEL** and **SET** button until the **ECO** indicator start flashing

or

CB350DS ID/ II ID

Press and hold the  up switch and  down switch until the **ECO** indicator start flashing.

- 3 Press the **SET** button the display move to clock setting and hour digit start flashing

or

CB350DS ID/ II ID

Press the **ENT** switch the display move to clock setting and hour digit start flashing.





- 4 Press the **SEL** button until the desired hour is displayed
 - ▶ Hour will advance by one hour, each time **SEL** button is pressed. Press and hold to advance the hour fast.

Or

CB350DS ID/ II ID

Press  up switch or  down switch until desired hour is displayed.

- ▶ Hour will change by one hour, each time  up switch or  down switch is pressed.



- 5 Press the **SET** button. The minute digits start flashing

Or

CB350DS ID/ II ID

Press the **ENT** switch. The minute digits start flashing.



6 Press **SEL** button until the desired minute is displayed

- ▶ Minute will advance by one minute, each time **SEL** button is pressed. Press and hold to advance the minute fast.

or

CB350DS ID/ II ID

Press ▲ up switch or ▼ down switch until desired minute is displayed.

- ▶ Minute will change by one hour, each time ▲ up switch or ▼ down switch is pressed.



7 Press the **SET** button. The clock is set and then the display moves to the backlight brightness adjustment

or

CB350DS ID/ II ID

Press **ENT** switch. The clock is set and then the display moves to the backlight brightness adjustment

- ▶ The time can also be set by turning the ignition switch off.
- ▶ The display will stop flashing automatically and the adjustment will be cancelled if the button is not pressed for about 30 seconds.

NOTICE

The clock will be reset "1:00" if the battery is disconnected.

Instruments (Continued)

3 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

① Turn the ignition switch ON.

② **ECO ON/OFF setting**

↓ Press the **SET** button

Clock setting

↓ Press the **SET** button

Display move to brightness adjustment

Press the **SEL** button. The brightness is switched.

Or

CB350DS ID/ II ID

ECO ON/OFF setting

↓ Press the **SET** button or **ENT** switch

Clock setting

↓ Press the **SET** button or **ENT** switch

Display move to brightness adjustment

Press ▲ up switch or ▼ down switch or **SEL** button. The brightness is switched.



③ Press the **SET** button. The brightness is set and then display move to the Bluetooth setting.

Or

CB350DS ID/ II ID

Press the **SET** button or **ENT** switch. The brightness is set and then display move to the Bluetooth setting.

The established setting can also be set by turning the ignition switch to the OFF position. The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.

If it does not work, contact your dealer.

4 Bluetooth pairing reset:

CB350DS ID/ II ID

You can reset the pairing information of *Bluetooth*®.

- Turn the ignition switch ON.
- ECO ON/OFF setting

 ↓ Press the **SET** button or **ENT** switch

Clock setting

 ↓ Press the **SET** button or **ENT** switch

Backlight Brightness adjustment


 ↓ Press the **SET** button or **ENT** switch

Bluetooth pairing reset
- The *Bluetooth*® icon in the display will flash and "reset" message will appear after pressing the **SET** button or **ENT** switch. Make sure the current setting is "YES" then press the **SET** button or **ENT** switch.

- ▶ If current setting is "NO", press the **SEL** button or ▲ up switch or ▼ down switch to switch the setting to "YES".
- ▶ The system waits for a response from the a target device for 2 minutes.



- When pairing is established the "SUCCE" message appear in the display and *Bluetooth*® icon comes on.
 - ▶ If the "FAIL" message appear in the display perform the pairing connection from the beginning.

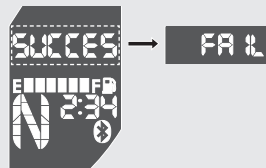

Instruments (Continued)

SERVICE DUE indicator 維修燈

When odometer reading reaches specified distance then service due indicator light blinks upto service limit (kms) and then light glows continuously.

SERVICE DUE indicator lighting pattern understanding: 維修燈解釋

Blinking: 閃爍

- ▶ Blinking of service due indicator indicates that your vehicle has reached the specified distance for service hence kindly visit your nearest Honda dealer for vehicle service.

Continuous glow: 恆亮

- ▶ Indicate that your vehicle has crossed the specified distance for Service.

Immediately visit Honda dealer for vehicle service. 立即前往本出經銷商獲取維修服務


First blinking of service due indicator will start 250 kms before first service (as per specified distance) of the vehicle.

Second blinking of service due indicator will start 500 kms before second service (as per specified distance) of the vehicle and later same pattern will continue for every next service.

Service due indicator will continuous glow if service of the vehicle is not done as per the specified distance mentioned in maintenance schedule.

NOTICE

Service due indicator blinking/ continuous glow is an indication for vehicle service due which is based on distance (Kms) covered by the vehicle however every service schedule is to be followed as per the maintenance schedule with respect to days or kms covered (whichever comes first)

If your vehicle is serviced before the specified distance as mentioned in maintenance schedule  P. 50, in that case service due indicator will start blinking, whenever your vehicle reach specified kilometer. Kindly visit your Honda dealer for service due indicator resetting.

Indicators 面板燈

If one of these indicators does not come on when it should, have your dealer check for problems.


← 左方向燈
**Left turn
signal indicator**

→ 右方向燈
**Right turn
signal indicator**

引擎燈
**PGM-FI (Programmed Fuel
Injection) malfunction indicator
lamp (MIL)**

Comes ON briefly when the ignition switch is turned to the ON position.

If it comes on while engine is running: → P. 89 如果在引擎運行時亮起

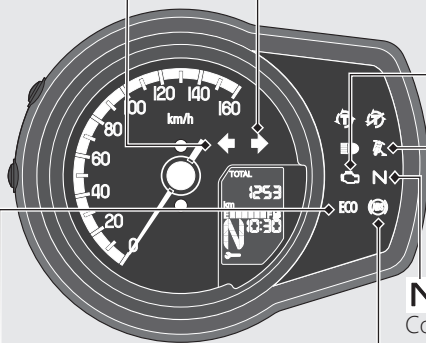

測柱提示燈
Side stand indicator → P. 76

The side stand flashes when the side stand is put down. It goes off when the side stand is raised

空檔顯示
N Neutral indicator

Comes ON when the transmission is in Neutral.

ABS作動顯示
(ABS) ABS (Anti-lock Brake System) indicator

Comes ON when the ignition switch is turned to the ON position.
Goes off when your speed reaches approximately 5 km/h (3 mph).

If it comes on while riding: → P. 89
如果在騎行時亮起


ECO ECO
indicator → P. 31
節能模式

Indicators (Continued)

遠燈顯示



High beam indicator

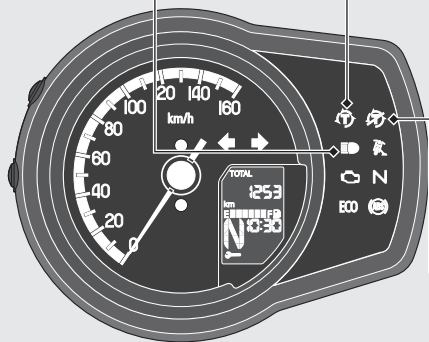

巡跡防滑燈

Torque Control indicator

- Comes ON when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 3 km/h to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

If it comes on while riding: P. 90



巡跡防關閉滑燈

Torque Control OFF indicator

- Comes ON when the Torque Control is turned Off.
- To turn OFF the Torque Control, press and hold the **HSTC** button.

節能模式

ECO indicator

When fuel consumption improves the **ECO** indicator will come on.

- ▶ When the vehicle comes to a stop, the **ECO** indicator will turn off.

開關節能模式

Activate or deactivate the indicator:

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold the **SEL** and **SET** button until **ECO** indicator starts flashing.

Or

CB350DS ID/ II ID

Press and hold ▲ up switch and ▼ down switch until **ECO** indicator starts flashing.

- 3 Press **SEL** button to select "ON" (activate) or "OFF" (deactivate).

Or

CB350DS ID/ II ID

Press ▲ up switch and ▼ down switch to select "ON" (activate) or "OFF" (deactivate).



- 4 To set the desired option, press **SET** button then the hour digits start flashing.
 - ▶ If turn off the ignition switch, then **ECO** indicator is SET.

Or

CB350DS ID/ II ID

To set the desired option, press **ENT** button then the hour digits start flashing.

- ▶ If turn off the ignition switch, then **ECO** indicator is SET.

Indicators (Continued) 指標

- 5 Press **SET** button then minute digits start flashing.

Or

CB350DS ID/ II ID

Press **ENT** button then minute digits start flashing.

- 6 Press **SET** button then display move backlight brightness adjustment.

Or

CB350DS ID/ II ID

Press **ENT** button then display move backlight brightness adjustment.

- 7 Press **SET** button. The **ECO** indicator is set.

Or

CB350DS ID/ II ID


Press **ENT** button or **SET** button then display move to Bluetooth setting.

- 8 **CB350DS ID/ II ID**

Press the **ENT** button or **SET** button, The **ECO** indicator is SET.

Switches 開關

CB350D ID

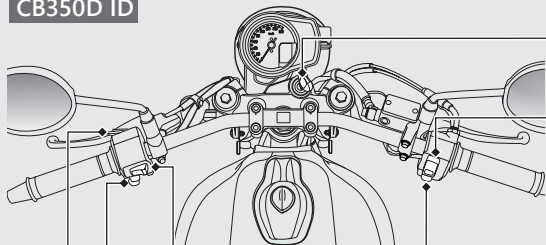

Ignition switch P. 34
點火開關

Engine stop switch/ Start button

Should normally remain in the (Run) position.

▶ In an emergency, switch to the (Stop) position to stop the engine.

Horn button
喇叭

Turn signal switch 方向燈

▶ Pressing the switch turns the turn signal off.

Hazard switch 雙黃燈
Flashes all turn signals at the same time.

Headlight dimmer/大燈調光器/前照燈控制開關

Passing light control switch

- **D**: High beam
- **D**: Low beam
- **PASS**: Flashes the high beam headlight

Switches (Continued) 開關

Ignition switch 點火開關

Switches the electrical system ON/ OFF, locks the steering.

- ▶ Key can be removed when in the OFF or LOCK position.

ON

Turns electrical system on for starting/ riding.

OFF

Turns engine off.

LOCK

Locks steering.





Steering Lock

Lock the steering when parking to help prevent theft.

A U-shaped wheel lock or similar device is also recommended.

Handle lock position left side only.

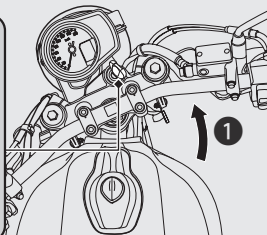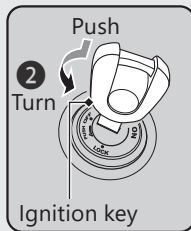

Locking 離鎖鎖

- 1 Turn the handlebar all the way to the left.
- 2 Push the key down, and turn the ignition switch to the LOCK position.
 - ▶ Jiggle the handlebar if the lock is difficult to engage.
- 3 Remove the key.

Unlocking 解鎖

Insert the key, push it in, and turn the ignition switch to the OFF position.

Honda Smartphone Voice Control system (HSVCS)

CB350DS ID/ II ID

Connecting your smartphone with the vehicle and a *Bluetooth*® headset via *Bluetooth*® allows you to operate the smartphone by voice input from the headset. You can also use the system by operating switches on the handlebar.

- ▶ To use the system, you need to install the dedicated application on your smartphone beforehand and pair your smartphone with the vehicle and the headset.

For terms of service and information on how to install/operate the dedicated application, see the following URL:

<https://global.honda/voice-control-system/>



Communication range:

Within 1 meters radius from vehicle.

Supported *Bluetooth*® version/profiles

<i>Bluetooth</i> ® version	Bluetooth 4.2 or higher
<i>Bluetooth</i> ® profiles	GATT (Generic Attribute Profiles)
	HOGP (HID over GATT Profiles)

Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motors Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

本田智能手機語音控制系統 (HSVCS)

Honda Smartphone Voice Control system (HSVCS) *(Continued)*

- Costs of network communication and communication equipment necessary for the use of this feature shall be borne by the user himself/herself.
- You cannot pair two or more smartphones at once.
- Some smartphones may not be compatible with the feature.
- We shall not be liable for any damages or trouble in the use of smartphone.
- When unable to connect your smartphone to the vehicle, change the storage location of the smartphone.
- We shall not be liable for guaranteeing connection device.

The system itself has certain limitations. Therefore, you must verify the voice guidance and information in the meter provided by the system by carefully observing the roadway, signs, and signals, etc. If you are unsure, proceed with caution. Always use your own good judgement, and obey traffic laws while riding.

WARNING

Using the Honda Smartphone Voice Control system while riding can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

- Be especially cautious when crossing intersections, in heavy traffic. etc.
- Observe the roadway, signs, and signals, carefully.
- Obey traffic laws while riding.

本出智能手机语音控制系统 (HSVCS) 的局限

Honda Smartphone Voice Control system (HSVCS) Limitations


Changes in operating systems, hardware, software, and other technology integral to providing Honda Smartphone Voice Control system functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Honda Smartphone Voice Control system functionality and services.

Honda cannot and does not provide any warranty or guarantee of future Honda Smartphone Voice Control system performance or functionality.

通過Bluetooth®配對智能手機

Pairing your smartphone via Bluetooth®

- ① Select the Bluetooth pairing reset menu. → P. 27

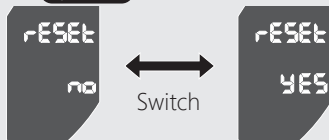

- ② Reset the pairing information according to the switch operation guide. → P. 22
- ③ After resetting, complete pairing while the Bluetooth® indicator flashing by operated the application on your smartphone.
 - ▶ For operation of the application, follow the instruction of the application.
 - ▶ The BT indicator flashes during pairing. Shows success/failure after completion.



- ▶ Make a Bluetooth® pairing after stopping at a safe place.

Honda Selectable Torque Control


本田控制介面

Torque Control (engine power Control) can be turned ON/ OFF.

- ▶ Do not operate the Torque Control switch while riding.
Stop the vehicle first, turn the Torque Control off or on.
- ▶ The Torque Control cannot be turn off when the system is activated (Torque Control indicator flashing).
- ▶ Each time the ignition switch is turned to the (ON) position, the Torque Control will automatically be set to ON.


■ Torque Control on and off

Torque Control can be turned on and off by pressing and holding the **HSTC** button.

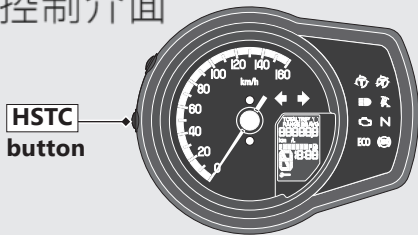

Starting the Engine 啟動引擎

Start your engine using the following procedure, regardless of whether the engine is cold or warm.

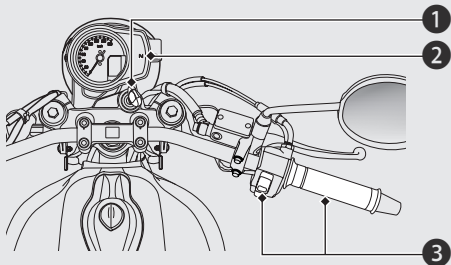

NOTICE

- If the engine does not start within 5 seconds, turn the ignition switch to the OFF position and wait 10 seconds before trying to start the engine again to recover battery voltage.
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.
- Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe discolouration.
- The engine will not start if the throttle is fully open.

- 1 Turn the ignition switch to the ON position.
- 2 Shift the transmission to Neutral
(N indicator to come on)
- 3 With the throttle completely closed, press the start button.


Starting the Engine (Continued) 啟動引擎

If you cannot start the engine:

如果您無法啟動引擎

open the throttle slightly (about 3mm, without freeplay) and press the start button.
 稍微打開油門（約3毫米，無空轉），然後按開始按鈕

About 3 mm without freeplay

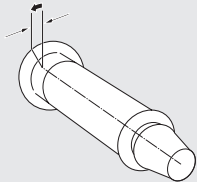

If the engine does not start:

如果引擎沒有啟動

- ① Open the throttle fully and press the start button for 5 seconds.
- ② Repeat the starting procedure.
- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait for 10 seconds, before trying steps ① & ② again.


如果引擎無法啟動

If Engine Will Not Start → P. 88


Shifting Gears 打檔桿

Your vehicle transmission has 5 forward gears in a one-down, four-up shift pattern when you shift with your toe.

You can also shift to a higher gear by depressing the shift lever with your heel.

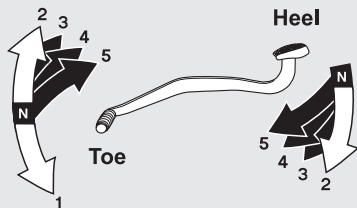

Refuelling 油箱

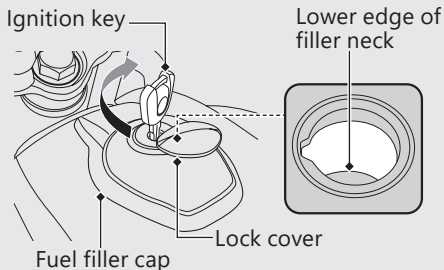

Do not fill with fuel above the lower edge of the filler neck.

Fuel type: Unleaded petrol only 無鉛汽油

Fuel octane number: Your vehicle is designed to use Research Octane Number (RON) 91 or higher. 91或更高

Tank capacity: 15.0 litres (3.96 US gal, 3.30 Imp gal)

Refuelling and Fuel Guidelines ➔ P. 12

加油和加油指南

打開加油口孔

Opening the Fuel Fill Cap

Slide the lock cover either left or right side, insert the ignition key, and turn it clockwise to open the cap.

關閉加油口孔

Closing the Fuel Fill Cap

- 1 After refuelling, push the fuel fill cap closed until it locks.
- 2 Remove the key and close the lock cover.
 - ▶ The key cannot be removed if the fuel fill cap is not locked.

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

USB Socket USB插座

Your vehicle is equipped with the USB socket (for USB Type-C only).

The USB socket is located at right side of speedometer panel.


This socket is for battery charge only.

Use USB devices at your own risk. In no event shall Honda be liable for any damage to your USB device when in use.

Only USB devices within the following specifications can be connected.

Open the cover to access the socket.

Rated capacity is **7.5W (5V, 1.5 A)**

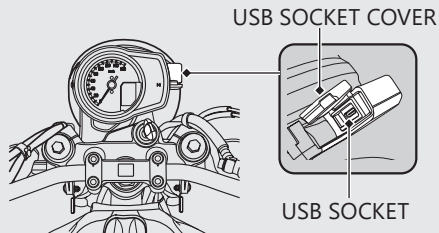

- ▶ To prevent the battery from becoming weak (or dead), keep the engine running while drawing current from the socket.
- ▶ To prevent entry of foreign matter into the socket, be sure to close the cover.
- ▶ Carefully secure all connected devices, as vibration may cause damage to them or they could shift unexpectedly.

NOTICE


- Using any heat-generating USB devices or improperly rated USB devices can damage the socket.
- Do not use the USB socket in wet conditions, when or while washing or any other wet conditions as these will damage the USB socket.
- Do not allow the USB's harness to become pinched or trapped.
- Do not allow the USB's harness to interfere with the steering or controls.

Storage Equipment

Helmet holder 安全帽鎖

The helmet holder is located rear left side of the vehicle.

- ▶ Use the helmet holder only while parked.

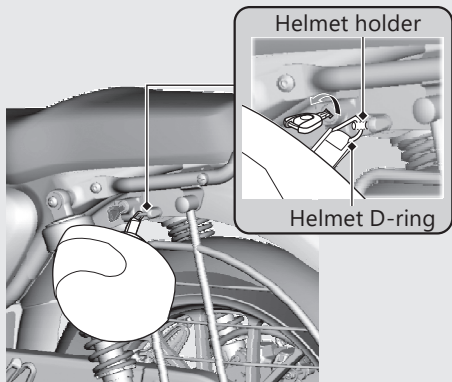

儲存設備


⚠ WARNING

Riding with a helmet attached to the holder can interfere with your ability to safely operate the vehicle and could lead to a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.

Allen-Key Tool 六角板手

Allen-Key Tool is located under the left side cover.

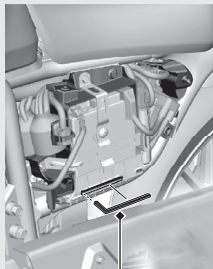


Allen key
六角板手

Removing the left side cover ➡ P. 64
卸下左侧盖

文件袋/補胎包 Document Bag/ First Aid Kit

Document bag and first aid kit located under the right side cover.

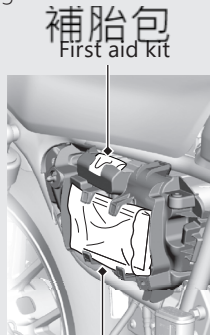

補胎包
First aid kit
Document bag
文件袋


Removing the right side cover ➡ P. 65
卸下右侧盖

儲存設備

Storage Equipment (Continued)

Tool Kit 隨車工具

Tool Kit located on the underside of the seat.

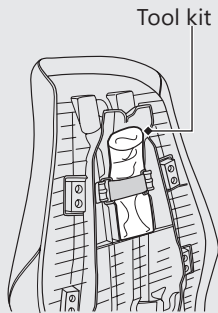

Removing the seat → P. 66
卸下座椅

維護

Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

Importance of Maintenance	維護的重要性	P.48	Side Stand	測柱	P.76
Maintenance Schedule	維護計劃	P.49	Drive Chain	鍊條	P.77
Maintenance Fundamentals	維護基礎	P.52	Clutch	離合器	P.81
Tool	工具	P.62	Throttle	風門	P.83
Removing & Installing Body Components	拆卸和安裝車身部件	P.63	Crankcase Breather	曲軸通氣	P.84
Battery 電池		P.63	Other Adjustments	其他調整	P.85
Left Side Cover 左側蓋		P.64	Adjusting the Headlight Aim 調整大燈		P.85
Right Side Cover 右側蓋		P.65	Adjusting the Rear Suspension 調整後避震		P.86
Seat 椅墊		P.66			
Spark Plug	火星塞	P.67			
Engine Oil	機油	P.69			
Brakes	煞車	P.73			

Importance of Maintenance 維護的重要性

Keeping your vehicle well-maintained is absolutely essential to your safety and to protect your investment, obtain maximum performance, avoid breakdowns, and reduce air pollution. Maintenance is the owner's responsibility. Be sure to inspect your vehicle before each ride, and perform the periodic checks specified in the Maintenance Schedule. ➔ P. 49

WARNING

Improperly maintaining your vehicle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

Maintenance Safety 維護安全

Always read the maintenance instructions before you begin each task, and make sure that you have the tools, parts, and skills required. We cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

Follow these guidelines when performing maintenance.

- Stop the engine and remove the key.
- Place your vehicle on a firm, level surface using the side stand, centre stand or a maintenance stand to provide support.
- Allow the engine, muffler, brakes, and other high-temperature parts to cool before servicing as you can get burned.
- Run the engine only when instructed, and do so in a well-ventilated area.

The maintenance schedule specifies the maintenance requirements necessary to ensure safe, dependable performance, and proper emission control.

Maintenance work should be performed in accordance with Honda's standards and specifications by properly trained and equipped technicians. Your dealer meets all of these requirements. Keep an accurate record of maintenance to help ensure that your vehicle is properly maintained.

Make sure that whomever performs the maintenance completes this record.

All scheduled maintenance is considered a normal owner operating cost and will be charged to you by your dealer. Retain all receipts. If you sell the vehicle, these receipts should be transferred with the vehicle to the new owner.

Honda recommends that your dealer should road test your vehicle after each periodic maintenance is carried out.

Maintenance Schedule

維護計劃

Items	Pre-ride Check ▶ P.52	Frequency *1									Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36				
		× 1,000 mi	0.6	4	8	12	16	20	24				
		Months	1	6	12	18	24	30	36				
Fuel Line 輸油管					I		I		I	I		-	
Fuel Level 燃油存量		I										-	
Throttle Operation 節氣門操作		I			I		I		I	I		83	
Air Cleaner *2 空濾						R			R			61	
Crankcase Breather *3 曲軸通氣管				C	C	C	C	C	C			84	
Spark Plug 火星塞					R		R		R			67	
Valve Clearance 氣門間隙				I	I	I	I	I	I			-	
Engine Oil 機油		I		R	R	R	R	R	R	R	R	69	
Engine Oil filter 機油濾心				R				R				71	
Engine Idle Speed 引擎怠速						I		I		I	I	-	
Evaporative Emission Control System		燃油蒸發排放控制系統						I				-	
Drive Chain 鏈條		I		Every 1000 km (600mi):						I	L		77
Drive Chain Slider 鏈條滑塊					I		I		I			80	

Maintenance Level

: Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

Procedures are provided in an official Honda Shop Manual.

: Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

I: Inspect (clean, adjust, lubricate, or replace, if necessary) 檢查

R: Replace 更換

C: Clean 清潔

L: Lubricate 潤滑

Items	Pre-ride Check ➔ P.52	Frequency *1									Annual Check	Regular Replace	Refer to page
		× 1,000 km	1	6	12	18	24	30	36				
		× 1,000 mi	0.6	4	8	12	16	20	24				
		Months	1	6	12	18	24	30	36				
Brake Fluid*4 煞車油												2 Years	73
Brake Pads Wear 來令片磨損													74
Brake System 剎車系統													73
Brakelight Switch 剎車燈開關													75
Headlight Aim 大燈瞄準													85
Lights/Horn 燈/喇叭													-
Engine Stop Switch 電門													-
Clutch System 離合器系統													81
Side Stand 側架													76
Suspension 避震													86
Nuts, Bolts, Fasteners 螺絲/扣件													-
Wheels/Tires 輪框/輪胎													59
Steering Head Bearings 龍頭軸承													-

Service according to odometer reading or months, whichever is earlier.

Notes:

- *1: At higher odometer readings, repeat at the frequency interval established here.
- *2: Service more frequently when riding in unusually wet or dusty areas.
- *3: Service more frequently when riding in rain or at full throttle.
- *4: Replacement requires mechanical skill.

Pre-ride Inspection 乘車前檢查

To ensure safety, it is your responsibility to perform a pre-ride inspection and make sure that any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tyre, can be a major inconvenience.

Check the following items before you get on your vehicle:

- Fuel level - Fill fuel tank when necessary. ➔ P. 42
- Throttle - Check for smooth opening and full closing in all steering positions. ➔ P. 83
- Engine oil level - Add engine oil if necessary. Check for leaks. ➔ P. 69
- Drive chain - Check condition and slack, adjust and lubricate if necessary. ➔ P. 77

- Brakes - Check operation;
Front and Rear: check brake fluid level and pads wear. ➔ P. 73, 74
- Lights and horn - Check that lights, indicators and horn function properly.
- Engine stop switch: Check for proper function. ➔ P. 33
- Clutch - Check operation;
Adjust freeplay if necessary. ➔ P. 81
- Side stand ignition cut-off system - Check for proper function. ➔ P. 76
- Wheels and tyres - Check condition, air pressure and adjust if necessary. ➔ P. 59, 118

Replacing Parts 更換零件

Always use Honda Genuine Parts or their equivalents to ensure reliability and safety.

WARNING

Installing non-Honda parts may make your vehicle unsafe and cause a crash in which you can be seriously hurt or killed.

Always use Honda Genuine Parts or equivalents that have been designed and approved for your vehicle.

Battery 電池

Your vehicle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water. Clean the battery terminals if they become dirty or corroded.

Do not remove the battery cap seals. There is no need to remove the cap when charging.

NOTICE

Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.

NOTICE

An improperly disposed of battery can be harmful to the environment and human health. Always confirm local regulations for proper battery disposal instruction.

Maintenance Fundamentals

緊急情況下該怎麼辦

What to do in an emergency

If any of the following occur, immediately see your doctor.

- Electrolyte splashes into your eyes:
 - ▶ Wash your eyes repeatedly with cool water for at least 15 minutes. Using water under pressure can damage your eyes.
- Electrolyte splashes onto your skin:
 - ▶ Remove affected clothing and wash your skin thoroughly using water.
- Electrolyte splashes into your mouth:
 - ▶ Rinse mouth thoroughly with water, and do not swallow.

WARNING

The battery gives off explosive hydrogen gas during normal operation.


A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery servicing.

Cleaning the Battery Terminals

1. Remove the battery. ➤ P. 63
2. If the terminals are starting to corrode and are coated with a white substance, wash with warm water and wipe clean.

3. If the terminals are heavily corroded, clean and polish the terminals with a wire brush or sandpaper. Wear safety glasses.

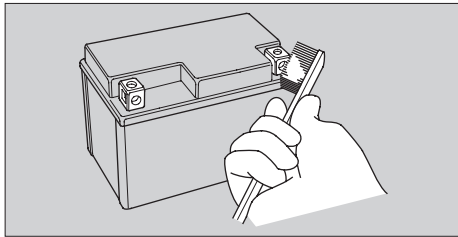

4. After cleaning, reinstall the battery.

The battery has a limited life span. Consult your dealer about when you should replace the battery. Always replace the battery with another maintenance-free battery of the same type.

NOTICE


Installing non-Honda electrical accessories can overload the electrical system, discharging the battery and possibly damaging the system.

Fuses

Fuses protect the electrical circuits on your vehicle. If something electrical on your vehicle stops working, check for and replace any blown fuses. ➔ P. 102

Inspecting and Replacing Fuses

Turn the ignition switch to the OFF position to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications." ➔ P. 119

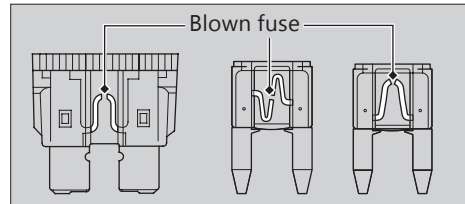

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

Maintenance Fundamentals

If a fuse fails repeatedly, you likely have an electrical fault. Have your vehicle inspected by your dealer.

Engine Oil 機油

Engine oil consumption varies and oil quality deteriorates according to riding conditions and time elapsed.

Check the engine oil level regularly, and add the recommended engine oil if necessary. Dirty oil or old oil should be changed as soon as possible.


Selecting the Engine Oil 選擇機油

For recommended engine oil, see "Specifications." ➡ P. 118

If you use non-Honda engine oil, check the label to make sure that the oil satisfies all of the following standards:


- JASO T 903 standard*1: MA
- SAE standard*2: 10W-30
- API classification*3: SJ or higher

*1. The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. For example, the following label shows the MA classification.

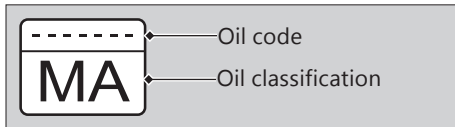

*2. The SAE standard grades oils by their viscosity.

*3. The API classification specifies the quality and performance rating of engine oils. Use SG or higher oils, excluding oils marked as "Energy Conserving" or "Resource Conserving" on the circular API service symbol.

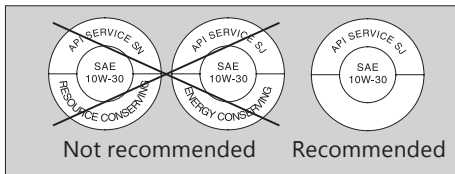

Brake Fluid 煞車油

Do not add or replace brake fluid, except in an emergency. Use only fresh brake fluid from a sealed container. If you do add fluid, have the brake system serviced by your dealer as soon as possible.

NOTICE

Brake fluid can damage plastic and painted surfaces. Wipe up spills immediately and wash thoroughly.


Recommended brake fluid: 推薦的煞車油
Honda DOT 4 Brake Fluid or equivalent

Drive Chain 鍊條

The drive chain must be inspected and lubricated regularly. Inspect the chain more frequently if you often ride on bad roads, ride at high speed, or ride with repeated fast acceleration. ➡ P. 77

If the chain does not move smoothly, makes strange noises, has damaged rollers, has loose pins, has missing O-rings, or kinks, have the chain inspected by your dealer.

Also inspect the drive sprocket and driven sprocket. If either has worn or damaged teeth, have the sprocket replaced by your dealer. 同時檢查齒盤。如果齒磨損或損壞請由經銷商更換。

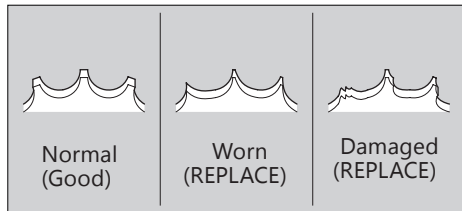

NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.

Maintenance Fundamentals

I Cleaning and Lubricating 清潔和潤滑


After inspecting the slack, clean the chain and sprockets while rotating the rear wheel. Use a dry cloth with chain cleaner designed specially for O-ring chains, or neutral detergent. Use a soft brush if the chain is dirty.

After cleaning, wipe dry and lubricate with the recommended lubricant.

Recommended lubricant: 推薦潤滑劑

Drive chain lubricant designed specifically for O-ring chains.

If not available, use SAE 80 or 90 gear oil.

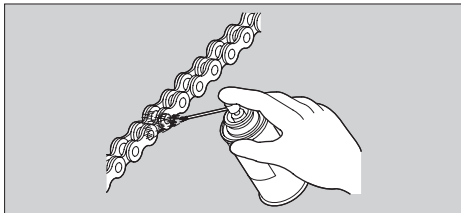

Do not use a steam cleaner, a high pressure cleaner, a wire brush, volatile solvent such as petrol and benzene, abrasive cleaner, chain cleaner or lubricant NOT designed specially for O-ring chains as these can damage the rubber O-ring seals.

Avoid getting lubricant on the brakes or tyres.

Avoid applying excess chain lubricant to prevent spray onto your clothes and the vehicle.

Crankcase Breather 曲軸通氣管

Service more frequently when riding in rain, at full throttle, or after the vehicle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.

If the drain tube is overflows, the air filter may become contaminated with engine oil causing poor engine performance. ➤ P. 84

Tyres (Inspecting/Replacing)


輪胎(檢查/更換)

Checking the Air Pressure 檢查胎壓


Visually inspect your tyres and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tyres look low. Always check air pressure when your tyres are cold.

Inspecting for Damage 檢查損壞

Inspect the tyres for cuts, slits, or cracks that exposes fabric or cords, or nails or other foreign objects embedded in the side of the tyre or the tread. Also inspect for any unusual bumps or bulges in the side walls of the tyres.

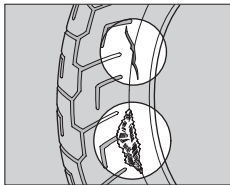**Inspecting for Abnormal Wear** 檢查異常磨損


Inspect the tyres for signs of abnormal wear on the contact surface.

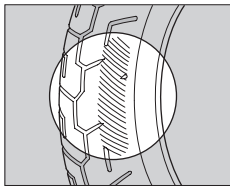

Inspecting Tread Depth 检查胎面深度

Inspect the tread wear indicators. If they become visible, replace the tyres immediately.

For safe riding, you should replace the tyres when the minimum tread depth is reached.

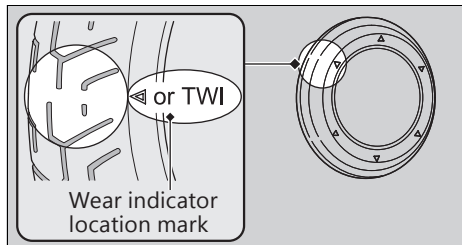

! WARNING

Riding on tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

Have your tyres replaced by your dealer. For recommended tyres air pressure and minimum tread depth, see "Specifications."

➔ P. 118

Follow these guidelines whenever you replace tyres.

- Use the recommended tyres or equivalents of the same size, construction, speed rating, and load range.

- Do not install a tube inside a tubeless tyre on this vehicle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tyres on this vehicle. The rims are designed for tubeless tyres, and during hard acceleration or braking, a tube-type tyre could slip on the rim and cause the tyre to rapidly deflate.

⚠ WARNING

Installing improper tyres on your vehicle can adversely affect handling and stability, and can cause a crash in which you can be seriously hurt or killed.


Always use the size and type of tyres recommended in this owner's manual.

Air Cleaner 空濾

This vehicle is equipped with a viscous type air cleaner element.

Air blow cleaning or any other cleaning can degrade the viscous element performance and cause the intake of dust.

Do not perform the maintenance. Should be serviced by your dealer.

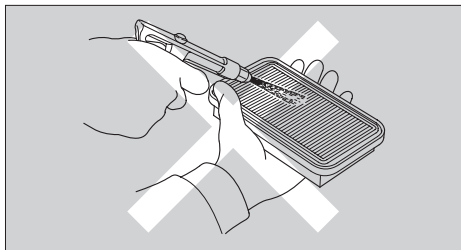

The tool kit is stored underside of the seat.

➡ P. 46

You can perform some roadside repairs, minor adjustments and parts replacement with the provided tools.

- 14 x 17 mm Open end wrench 開口扳手
- Spark plug wrench 火星塞扳手
- Standard/Philips screwdriver 標準螺絲起子
- Fuse puller 保險絲拔出器


The following tool is stored behind the left side cover. ➡ P. 45

- 5 mm Hex wrench (Allen Key) 六角扳手

Removing & Installing Body Components

拆卸和安裝車身部件

Battery 電池

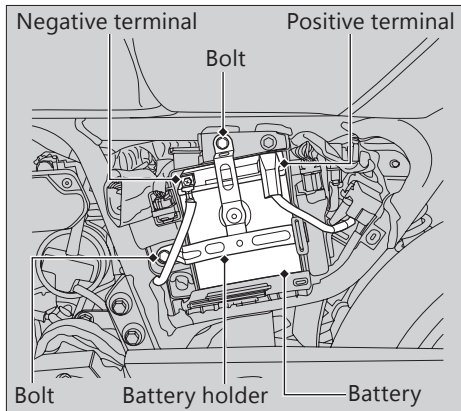

Removal


Make sure the ignition switch is in the OFF position.

1. Remove the left side cover. ➔ P. 64
2. Remove the battery holder by removing the bolts.
3. Disconnect the negative \ominus terminal from the battery.
4. Disconnect the positive \oplus terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive \oplus terminal first. Make sure that bolts and nuts are tight. Make sure the clock information is correct after the battery is reconnected. ➔ P. 22 For proper handling of the battery, see "Maintenance Fundamentals." ➔ P. 53 "Battery Goes Dead." ➔ P. 100

Left Side Cover 左側蓋

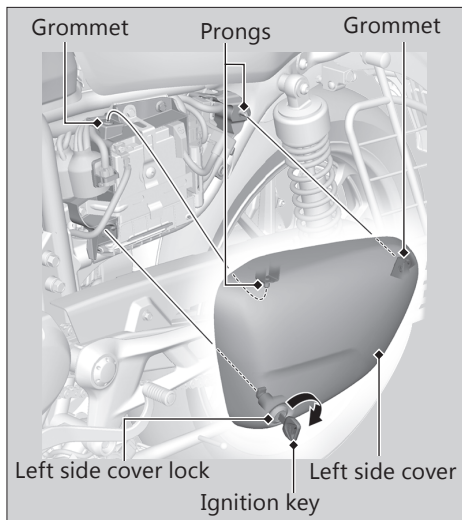


■ Removal : 拆卸

1. Insert the ignition key into the left side cover lock and turn it clockwise.
2. Remove the prongs from the grommets.
3. Remove the left side cover.

■ Installation : 安裝

Install the parts in the reverse order of removal.

Right Side Cover 右側蓋

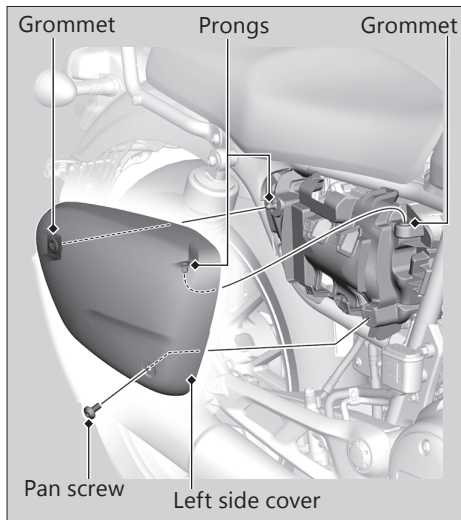


■ Removal : 拆卸

1. Remove the pan screw using the provided 5 mm Hex wrench (allen key). P. 45
2. Remove the prongs from the grommets.
3. Remove the right side cover.

■ Installation : 安裝

Install the parts in the reverse order of removal.

Seat

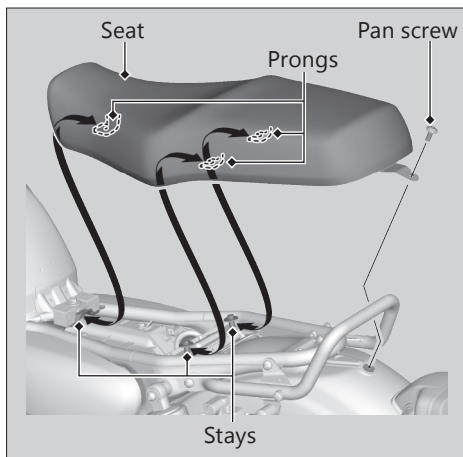

Removal 拆卸

1. Remove the pan screw using the provided 5 mm Hex wrench (allen key). ➔ P. 45
2. Remove the seat by pull it back and up.

Installation 安装

1. Insert the prongs into the stays on the frame.
2. Install and tighten the pan screw securely.

Make sure that the seat is locked securely in position by pulling it up lightly.

Spark Plug 火星塞

檢查火星塞 Checking Spark Plug


For the recommended spark plug, see "Specifications". ➤ P. 118

Use only the recommended type of spark plug in the recommended heat range.

NOTICE

Using a spark plug with an improper heat range can cause engine damage.

1. Disconnect the spark plug cap from the spark plug.
2. Clean any dirt from around the spark plug base.
3. Remove the spark plug using provided spark plug wrench. ➤ P. 62

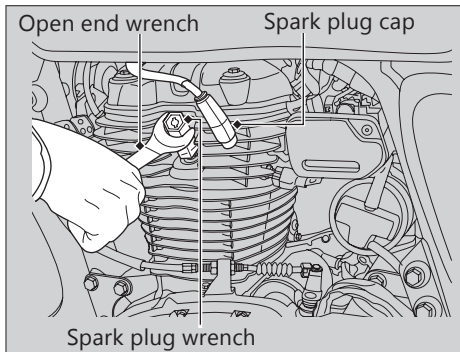


4. Inspect the electrodes and centre porcelain for deposits, erosion or carbon fouling.
 - ▶ If the erosion or deposit is heavy, replace the plug.
 - ▶ Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.

Spark Plug ► Checking Spark Plug

5. Check the spark plug gap using a wire-type feeler gauge.
 - If adjustment is necessary, bend the side electrode carefully.

The gap should be: 差距應該在
0.8 to 0.9 mm (0.03 to 0.04 in)

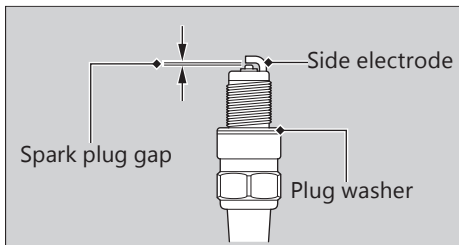

6. Make sure the plug washer is in good condition.
7. Install the spark plug. With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.

8. Tighten the spark plug:
 - If the old plug is good:
 - 1/8 turn after it seats.
 - If installing a new plug, tighten it twice to prevent loosening:
 - a) First, tighten the plug:
 - 1/2 turn after it seats.
 - b) Then loosen the plug.
 - c) Next, tighten the plug again:
 - 1/8 turn after it seats.

NOTICE


An improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

9. Install the parts in the reverse order of removal.
 - When reinstalling the spark plug cap, take care to avoid pinching any cables or wires.

檢查機油

Checking the Engine Oil

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch to the OFF position and wait 2 to 3 minutes.
3. Place your vehicle on its centre stand on a firm, level surface.
4. Remove the oil fill cap/dipstick and wipe it clean.
5. Insert the oil fill cap/dipstick until it seats, but don't screw it in.
6. Check that the oil level is between the upper level and lower level marks on the oil fill cap/dipstick.
7. Securely install the oil fill cap/dipstick.

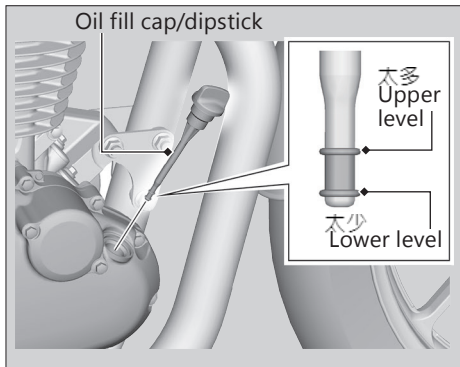

Adding Engine Oil 添加機油

If the engine oil is below or near the lower level mark, add the recommended engine oil.

➔ P. 56, 118

1. Remove the oil fill cap/dipstick. Add the recommended oil until it reaches the upper level mark.
 - ▶ Place your vehicle on its centre stand on a firm, level surface when checking the oil level.
 - ▶ Do not overfill above the upper level mark.
 - ▶ Make sure no foreign objects enter the oil filler opening.
 - ▶ Wipe up any spills immediately.
2. Securely reinstall the oil fill cap/dipstick.

NOTICE

Overfilling with oil or operating with insufficient oil can cause damage to your engine. Do not mix different brands and grades of oil. This may affect lubrication and clutch operation.

For the recommended oil and oil selection guidelines, see "Maintenance Fundamentals".

➔ P. 56

Changing Engine Oil and Filter

更換機油和機油濾清器


Changing the oil and filter requires special tools. We recommend that you have your vehicle serviced by your dealer.

Use a new Honda Genuine oil filter or equivalent specified for your model.

NOTICE


Using the wrong oil filter can result in serious damage to the engine.

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch to the OFF position and wait for 2 to 3 minutes.
3. Place your vehicle on its centre stand on a firm, level surface.
4. Place a drain pan under the drain bolt.
5. Remove the oil fill cap/dipstick, drain bolt and sealing washer to drain the oil.

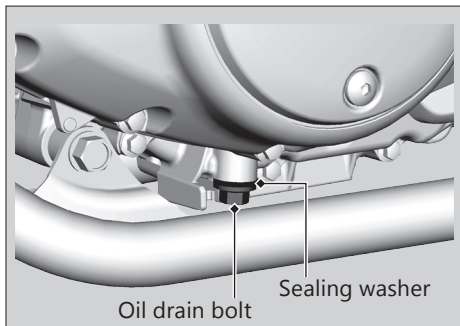

Engine Oil ► Changing Engine Oil and Filter

6. Remove the oil filter cover, oil filter, spring and O-ring by removing the oil filter cover bolts and let the remaining oil drain out.
 ► Discard the oil and oil filter at an approved recycling centre.

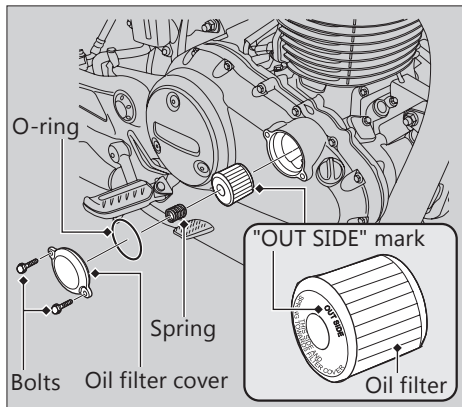

7. Install the new oil filter with the OUT-SIDE mark facing out.

8. Install the new O-ring into the oil filter cover and then install the oil filter spring and oil filter cover by tightening the oil filter cover bolts. 跟換O環

Torque: 10 N·m (1.0 kgf·m, 7 lbf·ft)

9. Install a new sealing washer onto the drain bolt. Tighten the drain bolt 在洩油螺絲上安裝新的墊片

Torque: 24 N·m (2.4 kgf·m, 18 lbf·ft)

10. Fill the crankcase with the recommended oil (► P. 40) and install the oil fill cap/dipstick.

Required oil 需要油量

When changing oil & filter: 機油與濾芯

2.0 litres (2.1 US qt, 1.8 Imp qt)

When changing oil: 只有機油

2.0 litres (2.1 US qt, 1.8 Imp qt)

11. Check the oil level. ► P. 69
 12. Check that there are no oil leaks.



NOTICE

Improper installation of the oil filter can result in serious damage to the engine.

Checking Brake Fluid 檢查煞車油

1. Place your vehicle in an upright position on a firm, level surface.
2. Check that the brake fluid reservoir is horizontal and that the fluid level is:
 - Front** above the LWR mark.
 - Rear** between the LOWER level and UPPER level marks.

If the brake fluid level in either reservoir is below the LWR mark or LOWER level mark or the brake lever and pedal freeplay becomes excessive, inspect the brake pads for wear. If the brake pads are not worn, you most likely have a leak. Have your vehicle inspected by your dealer.

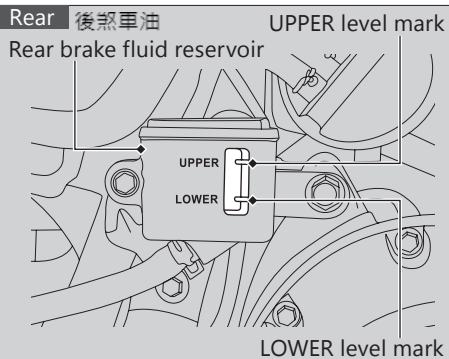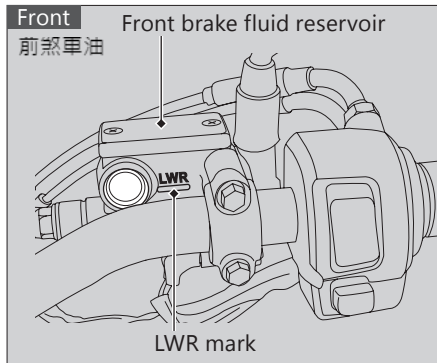

Brakes ▶ Inspecting the Brake Pads

來令片磨損檢查

Inspecting the Brake Pads



Check the condition of the brake pad wear indicator.

The pads need to be replaced if a brake pad is worn to the bottom of the indicator.

- 1. Front** Inspect the brake pads from below the brake caliper.
- 2. Rear** Inspect the brake pads from the rear right of the vehicle.

If necessary have the pads replaced by your dealer.


Always replace both left and right brake pads at the same time.

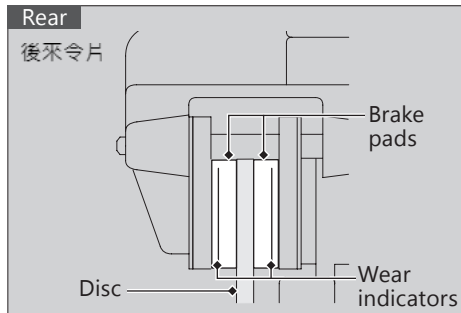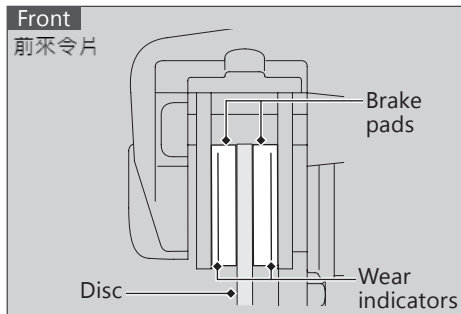


Adjusting the Brakelight Switch

調整剎車燈開關

Check the operation of the brake light switch. Hold the brakelight switch and turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

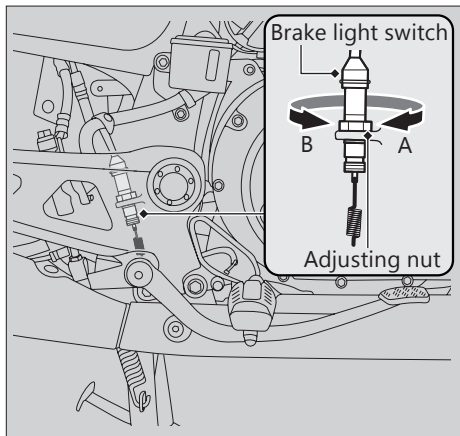

Checking the Side Stand

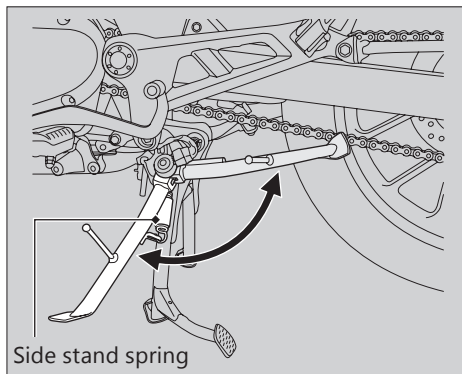

1. Place your vehicle on its centre stand on a firm, level surface.
2. Check that the side stand operates smoothly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.

3. Check the spring for damage or loss of tension.
4. Sit on the vehicle, shift the transmission to Neutral, and raise the side stand.
5. Start the engine, pull the clutch lever in, and shift the transmission into gear.
6. Lower the side stand all the way. The engine should stop as you lower the side stand. If the engine doesn't stop, have your vehicle inspected by your dealer.

Inspecting the Drive Chain Slack 檢查鏈條鬆弛程度


Check the drive chain slack at several points along the chain. If the slack is not constant at all points, some links may be kinked and binding.

Have the chain inspected by your dealer.

1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its centre stand on a firm, level surface.
3. Check the slack in the lower half of the drive chain midway between the sprockets.

Drive chain slack: 鏈條鬆弛程度
25 to 35 mm (1.0 to 1.4 in)

- ▶ Do not ride your vehicle if the slack exceeds 50 mm (2.0 in).

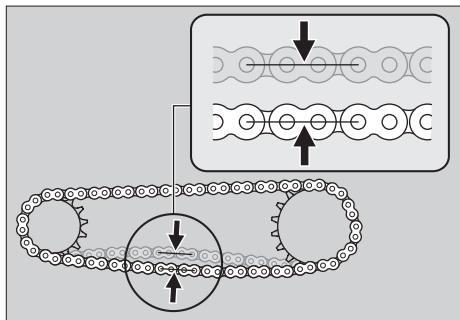

4. Rotate the rear wheel and check that the chain moves smoothly.
5. Inspect the sprockets. ➡ P. 57
6. Clean and lubricate the drive chain. ➡ P. 58



Adjusting the Drive Chain Slack

調整鏈條的鬆弛度

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its centre stand on a firm, level surface.
3. Loosen the rear axle nut.
4. Turn both adjusting bolts as equal number of turns until the correct drive chain slack is obtained. Turn the adjusting bolts counter clockwise to tighten the chain, clockwise to provide more slack. Adjust chain slack at a point midway between the drive sprocket and the driven sprocket.

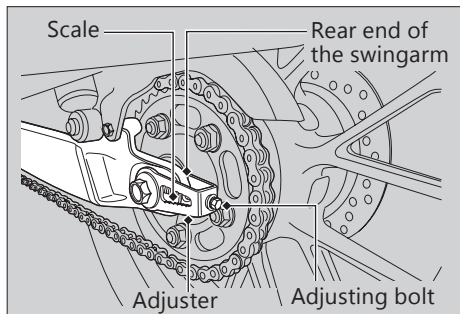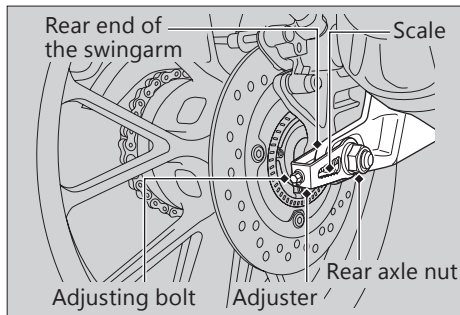

Check the drive chain slack. ➔ P. 77

5. Check rear axle alignment by making sure the rear end of the swingarm aligns with the corresponding scale on the adjuster. Both left and right swingarm ends should align with the same mark on the corresponding scale. If the axle is misaligned, turn the left or right adjusting bolt until the marks correspond.
6. Tighten the rear axle nut. 後軸螺絲

Torque: 88 N·m (9.0 kgf·m, 65 lbf·ft)

7. Tighten the adjusting bolt lightly.
8. Recheck drive chain slack.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.

Improper assembly may lead to loss of braking capacity.


Checking the Drive Chain Wear 檢查鏈條磨損

Check the chain wear label when adjusting the drive chain. If the red zone on the label aligns with the rear end of the swingarm after the chain has been adjusted to the proper slack, the chain is excessively worn and must be replaced.

Drive chain must be replaced with new sprocket set.

Chain: DID520VF4

If necessary have the drive chain replaced by your dealer.

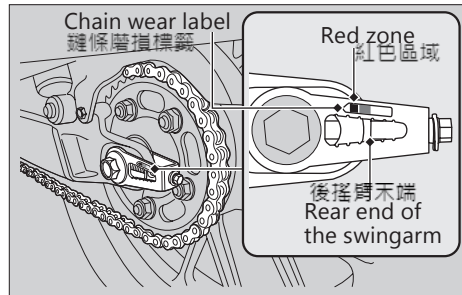


Checking the Drive Chain Slider 檢查鏈條滑塊

Check the condition of the drive chain slider from the right side of the vehicle.

The drive chain slider will need to be replaced if the chain slider is worn to the bottom of wear limit indicator.

If necessary have the drive chain slider replaced by your dealer.

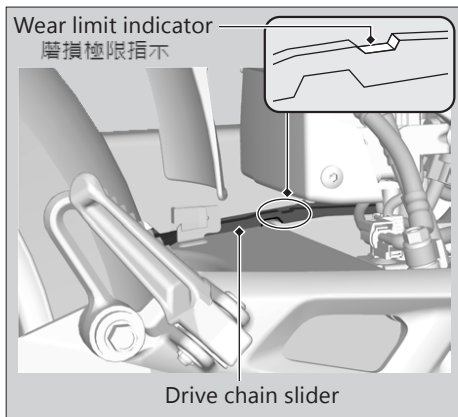


Checking the Clutch 檢查離合器

Checking the Clutch Lever Freeplay 檢查離合器拉桿間隙

Check the clutch lever freeplay. 檢查離合器拉桿間隙

Freeplay at the clutch lever: 間隙距離容許值

10 to 20 mm (0.39 to 0.79 in)

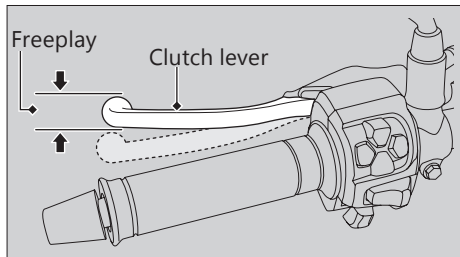

Check the clutch cable for kinks or signs of wear. If necessary have it replaced by your dealer.

Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.


NOTICE

Improper freeplay adjustment can cause premature clutch wear.

Adjusting the Clutch Lever Freeplay

調整離合拉桿間隙

1. Loosen the lock nut.
2. Turn the adjusting nut until the clutch lever freeplay is 10 to 20 mm (0.4 to 0.8 in).
3. Tighten the locknut and check the clutch lever freeplay.
4. Start the engine, pull the clutch lever in and shift into gear. Make sure the engine does not stall and the vehicle does not creep. Gradually release the clutch lever and open the throttle. Your vehicle should move smoothly and accelerate gradually.

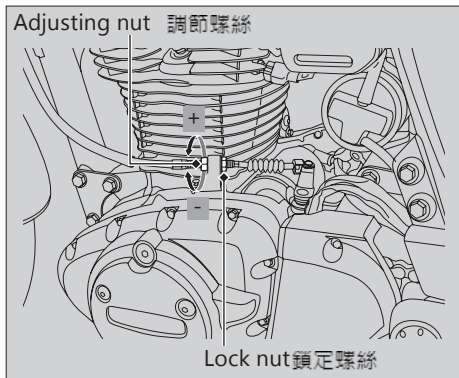

If proper adjustment cannot be obtained or the clutch does not work correctly, see your dealer.


Checking the Throttle

With the engine off, check that the throttle rotates smoothly from fully closed to fully open in all steering positions and throttle freeplay is correct. If the throttle does not move smoothly, close automatically, or if the cable is damaged, have the vehicle inspected by your dealer.

Freeplay at the throttle grip flange:


2 to 6 mm (0.1 to 0.2 in).

油門間隙容許值

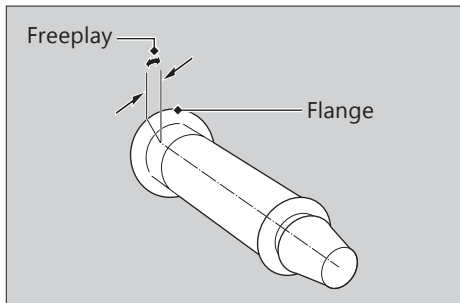

Cleaning the Crankcase Breather 清潔曲軸通氣管

1. Place a suitable container to receive deposits.
2. Remove the crankcase breather tube and drain deposits.
3. Reinstall the crankcase breather tube.

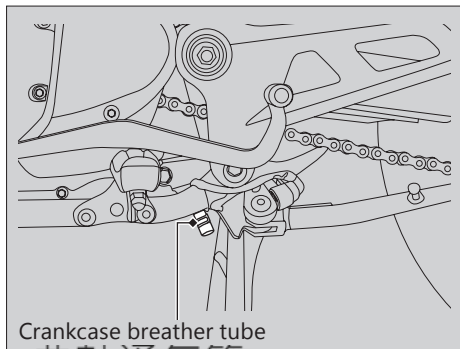

Crankcase breather tube


曲軸通氣管

Adjusting the Headlight Aim 大燈角度

You can adjust vertical aim of the headlight for proper alignment. Turn the pinion in or out as necessary using a Phillips screwdriver.

Tighten the bolt after adjustment.

Obey local laws and regulations.

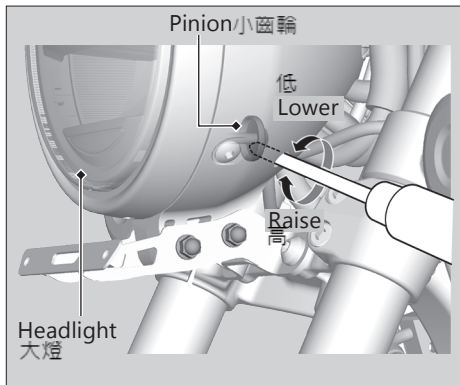

Adjusting the Rear Suspension 調整後避震

Adjusting the suspension requires a pin spanner. We recommend that you have your vehicle serviced by your dealer.

I Spring Preload 彈簧預載


You can adjust the spring preload by the adjuster to suit the load or the road surface. Use the pin spanner to turn the adjuster. Position 1 is for a decrease spring preload (soft), or turn the position 3 to 5 to increase spring preload (hard). The standard position is 2.

NOTICE

Attempting to adjust directly from 1 to 5 or 5 to 1 may damage the shock absorber.

NOTICE

Do not turn the adjuster beyond its limits.

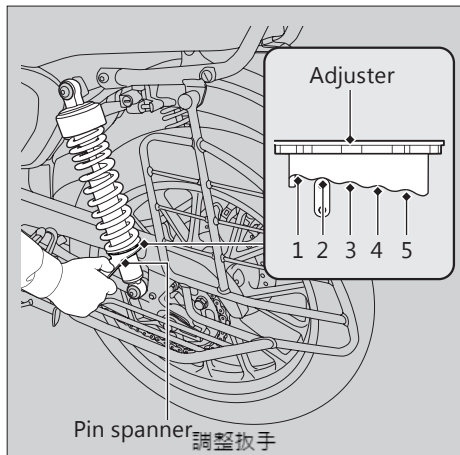

Troubleshooting

故障排除

Engine Will Not Start 引擎無法啟動 P. 88

Warning Indicators On or Flashing P. 89

警告指示 PGM-FI (Programmed Fuel Injection)
燈亮或閃爍 Malfunction Indicator Lamp (MIL) P. 89

ABS (Anti-lock Brake System) Indicator P. 89

Torque Control Indicator P. 90

Other Warning Indications 其他警告指示 P. 91

Fuel Gauge Failure Indication P. 91

Tyre Puncture 輪胎爆胎 P. 92

Smartphone Pairing Trouble P. 98
手機配對問題

Electrical Trouble 電氣故障 P. 100

Battery Goes Dead P. 100

Burned-out Light Bulb P. 100

Blown Fuse P. 102

Unstable Engine Operation Occur Intermittently 引擎運轉不穩定 P. 104

Starter Motor Operates But Engine Does Not Start


啟動馬達運轉但引擎無法起動

Check the following items:

- Check the correct engine starting sequence. ➔P. 39
- Check that there is petrol in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate 啟動馬達不工作

Check the following items:

- Check the correct engine starting sequence. ➔P. 39
- Make sure engine stop switch is in the  (Run) position. ➔P. 33
- Check for a blown fuse. ➔P. 102
- Check for a loose battery connection (➔P. 53) or battery terminal corrosion (➔P. 54).
- Check the condition of the battery. ➔P. 54

If the problem continues, have your vehicle inspected by your dealer.

PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL) 引擎燈

If the indicator comes on while riding, you may have a serious problem with the PGM-FI system. Reduce speed and have your vehicle inspected by your dealer as soon as possible.

ABS (Anti-lock Brake System) Indicator ABS燈

If the indicator operates in one of the following ways, you may have a serious problem with the ABS. Reduce your speed and have your vehicle inspected by your dealer as soon as possible.

- Indicator comes on or starts flashing while riding.
- Indicator does not come on when the ignition switch is in the ON position.
- Indicator does not go off at speeds above 5 km/h (3 mph).

If the ABS indicator stays on, your brakes will continue to work as a conventional system, but without the anti-locking function.

The ABS indicator may flash if you turn the rear wheel while the rear wheel is lifted off the ground. In this case, turn the ignition switch to the OFF position, and then to the ON position again. The ABS indicator will go off after your speed reaches 5 km/h (3 mph).

Torque Control Indicator

扭矩控制指示器

If the indicator operates in one of the following ways, you may have a serious problem with the Torque Control. Reduce your speed and have vehicle inspected by your dealer as soon as possible.

- Indicator comes on while riding .
- Indicator does not come on when the ignition switch is turned to the (ON) position.
- Indicator does not go off at speed above 3km/h.

Even when the Torque Control indicator is on, your vehicle will have normal riding ability without Torque Control function.

- When the indicator comes on while the Torque Control in operation, you will have to completely close the throttle to regain normal riding ability.

The Torque Control indicator may come on if you rotate the rear wheel while your motorcycle is lifted off the ground. In this case, turn the ignition switch to the (OFF) position, and then to the (ON) position again. The Torque Control indicator will go off after your speed reaches 3 km/h.



Other Warning Indications 其他警告指示

燃油表故障指示

Fuel Gauge Failure Indication

If the fuel system has an error, the fuel gauge indicators will be displayed as shown in the illustration.

If these occur, see your dealer as soon as possible.

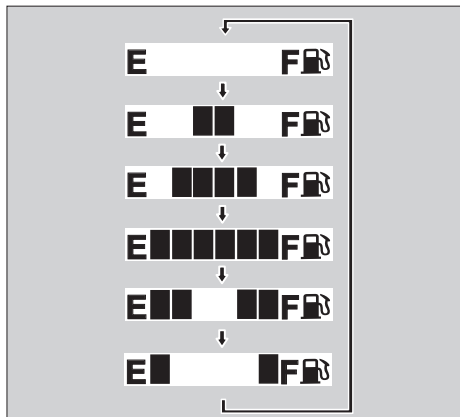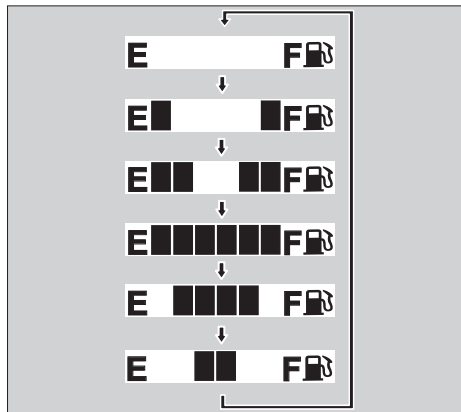

Repairing a puncture or removing a wheel requires special tools and technical expertise. We recommend you have this type of service performed by your dealer.

After an emergency repair, always have the tyre inspected/replaced by your dealer.

Emergency Repair Using a Tyre Repair Kit

使用輪胎修理套件進行緊急修

If your tyre has a minor puncture, you can make an emergency repair using a tubeless tyre repair kit.

Follow the instructions provided with the emergency tyre repair kit.

Riding your vehicle with a temporary tyre repair is very risky. Do not exceed 50 km/h (30 mph). Have the tyre replaced by your dealer as soon as possible.

WARNING

Riding your vehicle with a temporary tyre repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tyre repair, ride slowly and carefully and do not exceed 50 km/h (30 mph) until the tyre is replaced.



Removing Wheels 卸下輪子

Follow these procedures if you need to remove a wheel in order to repair a puncture.

I Front Wheel 前輪

Removal 拆卸

1. Place your vehicle on its centre stand on a firm, level surface.
2. Support your vehicle securely and raise the front wheel off the ground using a maintenance stand or a hoist.
3. Loosen the fork pinch bolt.
4. Remove the front axle shaft, front wheel and side collars.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - Do not pull the brake lever while the front wheel is removed.

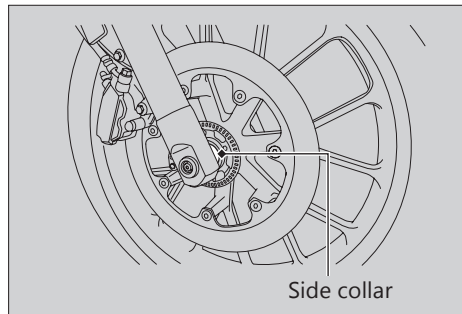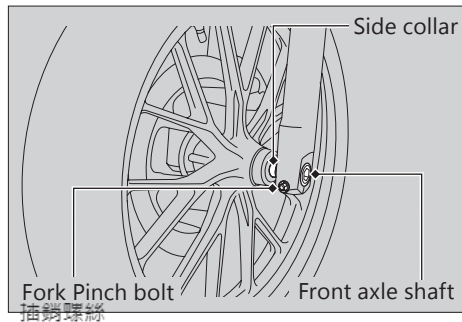

Installation 安裝

1. Attach the side collars and position the wheel between the fork legs. Insert the front axle shaft from the left side, through the left fork leg and wheel hub.

NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

2. Tighten the front axle shaft.

Torque: 54 N·m (5.5 kgf·m, 40 lbf·ft)

前軸鎖緊需要扭力值

3. Tighten the fork pinch bolt.

Torque: 22 N·m (2.2 kgf·m, 16 lbf·ft)

插銷螺絲鎖緊需要扭力值



4. After installing the wheel, apply the brake lever several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

I Rear Wheel 後輪

Removal 拆卸

1. Support your vehicle securely and raise the rear wheel off the ground using the centre stand or a hoist.
2. Loosen the rear axle nut and turn the adjusting bolts so the rear wheel can be moved all the way forward for maximum drive chain slack.
3. Remove the rear axle nut.
4. Remove the drive chain from the driven sprocket.
5. Remove the rear axle shaft.

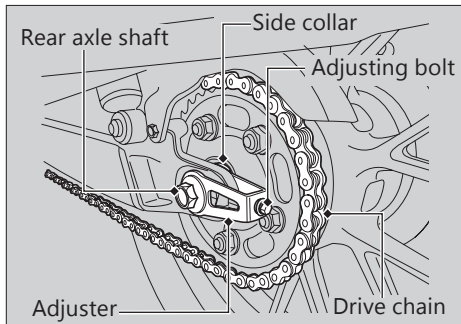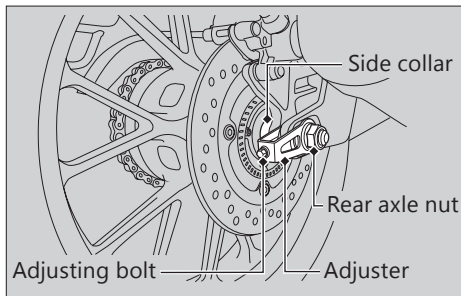

Tyre Puncture ► Removing Wheels

6. Remove the brake caliper bracket, rear wheel and side collars.
 - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - Do not push the brake pedal while the brake caliper is removed.


Installation 安裝

1. To install the rear wheel, reverse the removal procedure.
 - Take care to prevent the brake caliper from scratching the wheel during installation.

NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

2. Make sure that the slot on the brake caliper bracket is positioned in the lug on the swingarm.

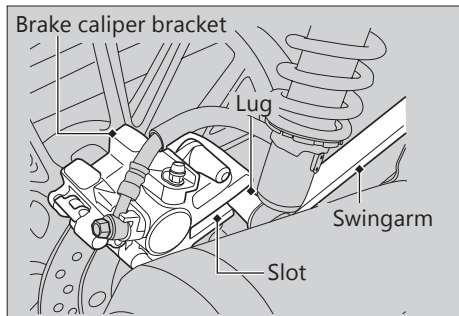

3. Adjust the drive chain. ►P. 78
4. Install and tighten the rear axle nut.

Torque: 88 N·m (9.0 kgf·m, 65 lbf·ft)

後軸鎖緊需要扭力值

5. After installing the wheel, apply the brake pedal several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

Symptom	Cause/remedy
<p data-bbox="99 381 317 433">無法配對</p> <p data-bbox="107 468 321 536">Unable to pair a smartphone</p>	<p data-bbox="404 174 1268 242">Some smartphones you use may be incompatible with the vehicle and/or the operable functions may be limited.</p>
	<p data-bbox="404 260 1263 288">Check that the vehicle and smartphone are both in pairing mode.</p> <p data-bbox="404 301 492 329">➡ P. 37</p>
	<p data-bbox="404 350 1239 495">Check your surroundings to make sure no other device being paired is present before re-pairing. Presence of a Bluetooth® device in the vicinity sometimes affects the pairing due to radio wave interference, etc.</p>
	<p data-bbox="404 519 1263 660">When connecting a smartphone, make sure no other Bluetooth® device readied for pairing is present. Presence of a Bluetooth® device in the vicinity sometimes affects the pairing due to radio wave interference, etc.</p>
	<p data-bbox="404 681 1253 826">Check that the vehicle pairing information is deleted from your smartphone Bluetooth® setting. Depending on the smartphone used, connecting may not be possible unless the pairing information is deleted.</p>

Symptom	Cause/remedy
<p data-bbox="122 384 340 436">無法配對</p> <p data-bbox="122 446 394 519">Unable to connect a smartphone</p>	<p data-bbox="438 174 1268 285">Depending on the smartphone you use, it may take some time for the vehicle to connect to a smartphone and to start using a dedicated application.</p>
	<p data-bbox="438 301 1282 413">The connection may be temporarily disconnected when starting the engine, which is normal and not a malfunction. The smartphone will be reconnected after the engine is started.</p>
	<p data-bbox="438 428 1224 540">Check that Bluetooth® status icon comes on. Refer to the instruction manual of your smartphone and check that your smartphone is in connectable state.</p>
	<p data-bbox="438 556 1275 668">Some smartphones you use may not connect automatically. For connecting, follow the instructions in the instruction manual of your smartphone.</p>
	<p data-bbox="438 683 1170 754">You cannot connect two or more smartphones at once.</p>

If the problem continues after the above-described inspection, have your vehicle inspected by your dealer.

電池沒電

Battery Goes Dead

Charge the battery using a motorcycle battery charger.

Remove the battery from the vehicle before charging.

Do not use an automobile-type battery charger, as these can overheat a motorcycle battery and cause permanent damage.

If the battery does not recover after recharging, contact your dealer.

NOTICE


Jump starting using an automobile battery can damage your vehicle's electrical system and is not recommended.

燒壞的燈泡

Burned-out Light Bulb

All light bulbs on the motorcycle are LEDs. If there is a LED which is not turned on see your dealer for servicing


Headlight/Front Turn Signal Light 大燈/前方向燈

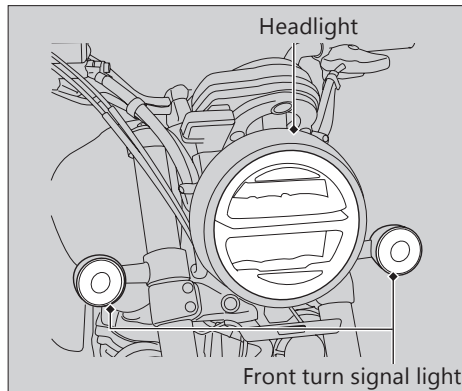

The headlight and front turn signal light uses several LEDs.

If there is an LED which is not turned on, see your dealer for servicing.

Brakelight/Taillight/License Plate Light 剎車燈/尾燈/牌照燈/後方向燈

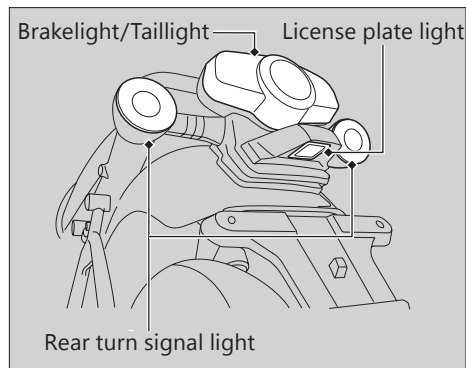


The brakelight/taillight, license plate light and rear turn signal light uses several LEDs.

If there is an LED which is not turned on, see your dealer for servicing.

Blown Fuse 燒斷保險絲

Before handling fuses, see "Inspecting and Replacing Fuses." ► P. 55

Fuse Box Fuses 保險絲盒

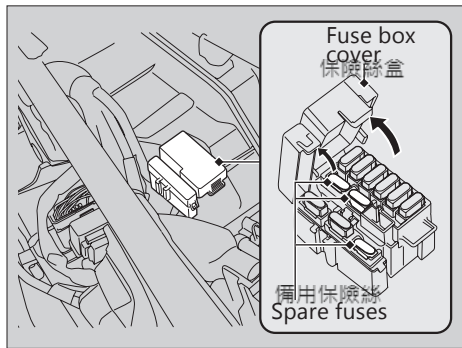


1. Remove the seat. ► P. 66
2. Open the fuse box cover.
3. Pull out the fuses one by one with the fuse puller provided in the tool kit (► P. 62) to check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
► Spare fuses are provided in the fuse box.
4. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your vehicle inspected by your dealer.

I Main Fuse 主保險絲

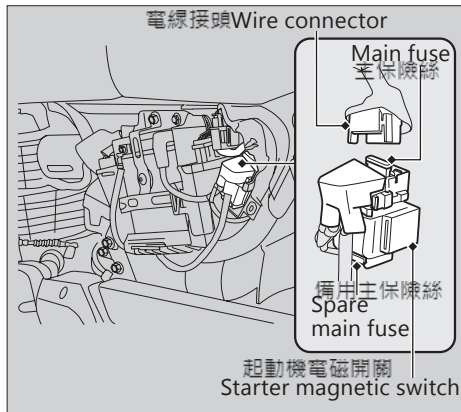

1. Remove the left side cover. ► P. 64
2. Pull out the starter magnetic switch.
3. Disconnect the wire connector of the starter magnetic switch..
4. Pull the main fuse out and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - Spare main fuse (30 A) is provided below the starter magnetic switch.
5. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your vehicle inspected by your dealer.

Unstable Engine Operation Occurs Intermittently

引擎不穩定地間歇性地發生

If the fuel pump filter is clogged, unstable engine operation will occur intermittently while riding.

Even if this symptom occurs, you can continue to ride your vehicle.

If unstable engine operation occurs even if sufficient fuel is available, have your vehicle inspected by your dealer as soon as possible.

其他注意事項

Keys.....	鑰匙	P. 106
Instruments, Controls, & Other Features	儀表控制和其他功能	P. 107
Caring for Your Vehicle	保養您的車輛	P. 108
Storing Your Vehicle	存放車輛	P. 111
Transporting Your Vehicle	運輸車輛	P. 112
You & the Environment	您與環境	P. 113
Serial Numbers	序列號	P. 114
Fuels Containing Alcohol	含酒精的燃料	P. 115
Catalytic Converters	觸媒	P. 116

Keys 鑰匙


Ignition key 點火鑰匙

Be sure to record the key number provided with the key number plate. Store the spare key and key number in a safe location.

To make a duplicate, take the spare key or the key number to your dealer.

If you lose all ignition keys and the key number, the ignition switch assembly will probably have to be removed by your dealer to determine the key number.

A metal key holder may cause damage to the area surrounding the ignition switch.

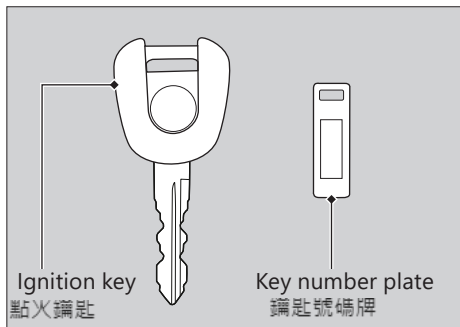

Instruments, Controls, & Other Features

儀器，控件和其他功能

Ignition Switch 大燈開關

Leaving the ignition switch in the ON position with the engine stopped will drain the battery. Do not turn the key while riding.

Engine Stop Switch 電門

Do not use the engine stop switch except in an emergency. Doing so when riding will cause the engine to suddenly turn off, making riding unsafe.

If you stop the engine using the engine stop switch, turn the ignition switch to the OFF position. Failing to do so will drain the battery.

Odometer 里程表

The display locks at 999,999 when the read-out exceeds 999,999.

Tripmeter 行程計

The tripmeter A and B return to 0.0 when the read-out exceeds 9,999.9.

Also average fuel mileage & available driving distance are reset at same time with tripmeter A.

Document Bag 文件袋

The owner's manual, registration, and insurance information can be stored in the plastic document bag located under the seat.

Ignition Cut-off System 點火截止系統

A banking (lean angle) sensor automatically stops the engine and fuel pump if the vehicle falls over. To reset the sensor, you must turn the ignition switch to the OFF position and back to the ON position before the engine can be restarted.

Caring for Your Vehicle

保養您的車輛

Frequent cleaning and polishing is important to ensure the life of your Honda. A clean vehicle makes it easier to spot potential problems. In particular, seawater and salts used to prevent ice on roads promote the formation of corrosion. Always wash your vehicle thoroughly after riding on coastal or treated roads.

Washing

洗滌

Allow the engine, muffler, brakes, and other high-temperature parts to cool before washing.

1. Rinse your vehicle thoroughly using a low pressure garden hose to remove loose dirt.
2. If necessary, use a sponge or a soft towel with mild cleaner to remove road grime.
 - ▶ Clean the headlight lens, panels, and other plastic components with extra care to avoid scratching them. Avoid directing water into the air cleaner, muffler, and electrical parts.

3. Thoroughly rinse your vehicle with plenty of clean water and dry with a soft, clean cloth.
4. After the vehicle dries, lubricate any moving parts.
 - ▶ Make sure that no lubricant spills onto the brakes or tyres. Brake discs, pads, drum or shoes contaminated with oil will suffer greatly reduced braking effectiveness and can lead to a crash.
5. Lubricate the drive chain immediately after washing and drying the vehicle.
6. Apply a coat of wax to prevent corrosion.
 - ▶ Avoid products that contain harsh detergents or chemical solvents. These can damage the metal, paint, and plastic on your vehicle. Keep the wax clear of the tyres and brakes.
 - ▶ If your vehicle has any matte painted parts, do not apply a coat of wax to the matte painted surface.

I Washing Precautions 洗滌注意事項

Follow these guidelines when washing:

- Do not use high-pressure washers:
 - ▶ High-pressure water cleaners can damage moving parts and electrical parts, rendering them inoperable.
 - ▶ Water in the air intake can be drawn into the throttle body and/or enter the air cleaner.
 - Do not direct water at the muffler:
 - ▶ Water in the muffler can prevent starting and causes rust in the muffler.
 - Dry the brakes:
 - ▶ Water adversely affects braking effectiveness. After washing, apply the brakes intermittently at low speed to help dry them.
 - Do not direct water under the seat:
 - ▶ Water under the seat can damage your documents and other belongings.
-
- Do not direct water at the air cleaner:
 - ▶ Water in the air cleaner can prevent the engine from starting.
 - Do not direct water near the headlight:
 - ▶ The headlight's inside lens may fog temporarily after washing or while riding in rain. This does not impact the headlight function. However, if you see a large amount of water or ice accumulated inside the lens(es), have your vehicle inspected by your dealer.
 - Do not use wax or polishing compounds on matte painted surface:
 - ▶ Use a soft cloth or sponge, plenty of water, and a mild detergent to clean matte painted surfaces. Dry with a soft clean cloth.

Caring for Your Vehicle

Aluminium Components 鋁零件

Aluminium will corrode from contact with dirt, mud, or road salt. Clean aluminium parts regularly and follow these guidelines to avoid scratches:

- Do not use stiff brushes, steel wool, or cleaners containing abrasives.
- Avoid riding over or scraping against curbs.

Panels 面板

Follow these guidelines to prevent scratches and blemishes:

- Wash gently using a soft sponge and plenty of water.
- To remove stubborn stains, use diluted detergent and rinse thoroughly with plenty of water.
- Avoid getting petrol, brake fluid, or detergents on the instruments, panels or headlight.

Exhaust Pipe and Muffler 排氣管和消音器

When the exhaust pipe and muffler are painted, do not use a commercially available abrasive kitchen cleaning compound. Use a neutral detergent to clean the painted surface on the exhaust pipe and muffler. If you are not sure if your exhaust pipe and muffler are painted, contact your dealer.

Storing Your Vehicle

存放車輛

If you store your vehicle outdoors, you should consider using a full-body vehicle cover.

If you won't be riding for an extended period, follow these guidelines:

- Wash your vehicle and wax all painted surfaces (except matte painted surfaces). Coat chrome pieces with rust-inhibiting oil.
- Lubricate the drive chain. ➤ P. 58
- Place your vehicle on its centre stand and position a block so that both tyres are off the ground.
- After rain, remove the body cover and allow the vehicle to dry.
- Remove the battery (➤ P. 63) to prevent discharge. Fully charge the battery and then place it in a shaded, well-ventilated area.
 - ▶ If you leave the battery in place, disconnect the negative ⊖ terminal to prevent discharge.

After removing your vehicle from storage, inspect all maintenance items required by the Maintenance Schedule.

Transporting Your Vehicle

運輸車輛

If your vehicle needs to be transported, it should be carried on a motorcycle trailer or a flatbed truck or trailer that has a loading ramp or lifting platform, and motorcycle tie-down straps. Never try to tow your vehicle with a wheel or wheels on the ground.

NOTICE

Towing your vehicle can cause serious damage to the transmission.

You & the Environment

您與環境

Owning and riding a vehicle can be enjoyable, but you must do your part to protect the environment.

Choose Sensible Cleaners 選擇對的清潔劑

Use a biodegradable detergent when you wash your vehicle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer.



Recycle Wastes 回收廢物

Put oil and other toxic wastes in approved containers and take them to a recycling centre. Call your local or state office of public works or environmental services to find a recycling centre in your area, and to get instructions on how to dispose of non-recyclable wastes. Do not place used engine oil in the trash, or pour it

down a drain or on the ground. Used oil, petrol, and cleaning solvents contain poisons that can hurt refuse workers and contaminate drinking water, lakes, rivers, and oceans.

Serial Numbers 車身號碼

The frame and engine serial numbers uniquely identify your vehicle and are required in order to register your vehicle. They may also be required when ordering replacement parts. You should record these numbers and keep them in a safe place.

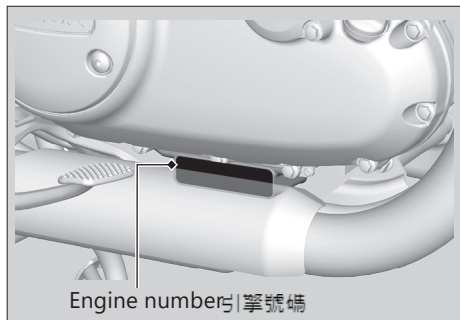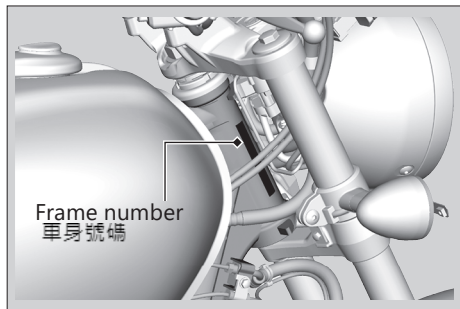

含酒精的燃料

Fuels Containing Alcohol

Some conventional fuels blended with alcohol are available in some locales to help reduce emissions to meet clean air standards. If you plan to use blended fuel, check that it is unleaded and meets the minimum octane rating requirement.

The following fuel blends can be used in your vehicle:

- Ethanol (ethyl alcohol) up to 10% by volume.
 - ▶ Petrol containing ethanol may be marketed under the name Gasohol.

The use of petrol containing more than 10% ethanol may:

- Damage the painting of the fuel tank.
- Damage the rubber tubes of the fuel line.
- Cause corrosion of the fuel tank.
- Cause poor drivability.

NOTICE

Use of blended fuels containing higher than approved percentages can damage metal, rubber, plastic parts of your fuel system.

If you notice any undesirable operating symptoms or performance problems, try a different brand of petrol.

Catalytic Converters 觸媒

This vehicle is equipped with two three-way catalytic converters. Each catalytic converter contains precious metals that serve as catalysts in high temperature chemical reactions that convert hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) in the exhaust gasses into safe compounds.

A defective catalytic converter contributes to air pollution and can impair your engine's performance. A replacement unit must be an original Honda part or equivalent.

Follow these guidelines to protect your vehicle's catalytic converters.

- Always use unleaded petrol. Leaded petrol will damage the catalytic converters.
- Keep the engine in good running condition.
- Have your vehicle serviced if your engine is misfiring, backfiring, stalling, or otherwise not running properly, stop riding and turn off the engine.

■ Main Components 主要成分

Overall length 總體長度		2163 mm (85.2 in)
Overall width 總寬度		800 mm (31.5 in)
Overall height 總高		1107 mm (43.6 in)
Wheelbase 軸距		1441 mm (56.7 in)
Minimum ground clearance 最小離地間隙		166 mm (6.5 in)
Caster angle 腳輪角度		27.30° 0'
Trail		120 mm (4.7 in)
Curb weight 整備重	CB350D ID	181 kg (399.0 lb)
	CB350DS ID, II ID	182 kg (401.2 lb)
Maximum weight capacity*1 最大承重		180 kg (397 lb)
Passenger capacity 載客量		Rider and 1 passenger
Minimum turning radius 轉彎半徑		2.30 m (7.55 ft)

*1 Including rider, passenger, all luggage, and accessories

Displacement	348.36 cm ³ (21.250 cu-in)	
Bore x stroke 缸徑×行程	70.000 x 90.519 mm (2.7559 × 3.5637 in)	
Compression ratio 壓縮比	9.5 : 1	
Fuel 汽油	Unleaded petrol 無鉛汽油 91 或更高 Recommended: 91 RON or higher	
Fuel containing alcohol 酒精燃料	ETHANOL up to 10% by volume 乙醇含量最高可達10%	
Tank capacity 油箱容量	15 litres (3.96 US gal, 3.30 Imp gal)	
Battery 電池	YTZ7	
	12 V - 6.0 Ah (10 HR)	
Gear ratio 齒輪比	1st	3.071
	2nd	1.947
	3rd	1.407
	4th	1.100
	5th	0.900
Reduction ratio 減速比 (primary / final)	2.095 / 2.500	

Specifications

■ Service Data

Tyre size 輪胎尺寸	Front 前	100/90-19M/C 57H
	Rear 後	130/70-18M/C 63H
Tyre type 輪胎類型		Tubeless 無內胎
Recommended Tyre 推薦輪胎	Front	MRF ZAPPER-FS
	Rear	MRF NYLOGRIP ZAPPER-Y
Tyre air pressure 建議胎壓	Front	(Driver only) 200 kPa (2.00 kgf/cm ² , 29 psi) (Driver and passenger) 200 kPa (2.00 kgf/cm ² , 29 psi)
	Rear	(Driver only) 225 kPa (2.25 kgf/cm ² , 33 psi) (Driver and passenger) 司機和乘客 250 kPa (2.50 kgf/cm ² , 36 psi)
Spark plug 火星塞		MR6K-9
Spark plug gap 火星塞間隙		0.80 to 0.90 mm (0.03 to 0.04 in)
Idle speed 怠速轉速		1000 ± 100 rpm

Recommended engine oil 推薦機油	Honda 4-stroke motorcycle oil API Service Classification SJ or higher, excluding oils marked as "Energy Conserving," or "Resource Conserving"	
	SAE 5W-30 or 10W-30, JASO T 903 standard MA	

機油容量 Engine oil capacity	After draining 單換機油	2.0 litres (2.1 US qt, 1.8 Imp qt)
	After draining & engine oil filter change 換機油跟濾心	2.0 litres (2.1 US qt, 1.8 Imp qt)
	After disassembly 總容量	2.5 litres (2.6 US qt, 2.2 Imp qt)

Recommended brake fluid 推薦煞車油	Dot 4 Brake fluid
----------------------------------	-------------------

Recommended drive chain lubricant 推薦的鏈條潤滑劑	Drive chain lubricant If not available, use SAE 80 or 90 gear oil 鏈條潤滑劑 如果不可用請使用 SAE 80 或 90 齒輪油
Drive chain slack 鏈條鬆弛誤差範圍	25 to 35 mm (1.0 to 1.4 in)

Standard drive chain 標準鏈條	DID520VF4
	No. of links 104
Standard sprocket size 前後齒盤	Drive sprocket 前 14T
	Driven sprocket 後 35T

■ Bulbs 燈泡

Headlight 大燈	LED
Position light 定位燈	LED
Brakelight/Taillight 剎車燈/尾燈	LED
Front turn signal 前方回燈	LED
Rear turn signal 後轉回燈	LED
License plate light 牌照燈	LED

■ Fuses 保險絲

Main fuse 主保險絲	30 A
Other fuses 其他保險絲	20 A x 2
	10 A x 2
	7.5 A x 4

■ Torque Specifications 扭力規格

Engine oil drain bolt 洩油螺絲	24 N·m (2.4 kgf·m, 18 lbf·ft)
Engine oil filter cover bolt 濾心蓋螺絲	10 N·m (1.0 kgf·m, 7 lbf·ft)
Front fork Pinch bolt 抽銷螺絲	22 N·m (2.2 kgf·m, 16 lbf·ft)
Front axle shaft 前軸	54 N·m (5.5 kgf·m, 40 lbf·ft)
Rear axle nut 後軸	88 N·m (9.0 kgf·m, 65 lbf·ft)

Warranty Policy (Valid in India only)

保固政策

Honda Motorcycle & Scooter India (Pvt.) Ltd. (HMSI) gives the following warranty in respect of vehicle "**H'ness CB350**" manufactured by them. Proper care and precaution has been taken to ensure the best quality in respect of the material and workmanship in manufacturing "**H'ness CB350**".

HMSI would repair or replace at its discretion, those part(s) found to have manufacturing defects during examination. This repair or replacement of part(s) would be done free of charge at their authorised workshop, within a warranty period of 36 months from the date of sale or until the vehicle has covered 42000 kms, whichever comes first.

Warranty claims in respect of proprietary parts like tyres and battery are warranted by their respective manufacturers and should be claimed on them directly by customer.

NOTE: Battery Warranty is applicable from 21 months from Date Of Charging at manufacturer or 18 Months from the Date Of Sale or 20000 Kms whichever is earlier.

In all such cases the decision of the respective manufacturer will be final and binding. HMSI shall not be liable in any manner to replace them though their dealers will give full assistance in preferring such claims on their manufacturers.

HMSI undertake no liability in the matter of consequential loss or damage caused due to the failure of the parts. Delay, if any, at the repairing workshop in carrying out repair to vehicle shall not be a ground for extending the warranty period nor shall it give any right to the customer for claiming any compensation for damages.

HMSI reserves the right either to repair or replace the defective part.

Where a defective part can be replaced by part/s of alternative brand/s, which are normally used by HMSI in the course of manufacturing, HMSI reserves the right to carry out the replacement by a part or parts of any such alternative brands.

This warranty and any claim arising there from is subject to Gurugram jurisdiction only.

No claim for exchange or repair can be considered unless the customer:

- a. Ensures that immediately upon discovery of the defect, he approaches any nearest authorised dealer of HMSI with the concerned vehicle and enables him to remove and dispatch the part/parts attributing to manufacturing defect to the company.
- b. Produces Owner's Manual in original, to enable that dealer to verify the details. It must be expressly understood that claims forwarded directly to us by the owner/customer will not be entertained at all and such defective part/parts thus forwarded by them will lie at our factory at their own risk, and this warranty shall not be enforceable.

Further this warranty is not applicable to:

1. Any **"H'ness CB350"** on which any free and paid services has not been carried out, as per schedule given in Owner's Manual.
2. Normal maintenance operations like valve adjustment, cleaning of fuel system or such other adjustments.
3. HMSI does not warrant normal wear and tear items like Clutch Disc, Chain, Chain Sprocket, Wheel Rim (in case of misalignment and bent), Bushes, Fasteners, Shims, Washers and Electrical Items like Bulbs, Rubber and Plastic Components like Grommets, O-Rings, Bellows as well as Packings, Gaskets, Oil Seals and Consumables like Fuel Filter, Air Cleaner Element, Engine Oil, Grease, Suspension Oil and other items as specified by HMSI.
4. Fasteners and clips which need replacement during maintenance/service will not be covered under warranty.

Warranty Policy (Valid in India Only)

5. If there is any damage to the painted surface due to industrial pollution or other extraneous factors.
6. Any damage resulting from unavoidable natural disaster i.e fire, collision, earthquake, flood etc.
7. Any damage caused by exposure of the product to soot and smoke, chemical agents, bird-droppings, sea water, sea breeze, or other environmental phenomenon.
8. If there is any damage caused due to usage of improper oil/grease, non genuine parts.
9. For two-wheelers, which have been used for any commercial purposes as taxi etc.
10. For maintenance repairs required due to misuse while driving or due to adulteration of oil, petrol or due to bad road conditions.
11. Recommended fuel quality not used.
12. Parts of the vehicle that have been subjected to misuse, accident, negligent treatment or which have been used in conjunction with parts and an equipment not manufactured or recommended for use by HMSI if in the sole judgment of HMSI, such use prematurely affects the performance and reliability of the vehicle.
13. Parts of the vehicle that have been altered or modified or replaced in unauthorised manner, and which in the sole judgment of HMSI affect its performance and reliability.
14. The vehicle that has not been serviced by HMSI authorised dealer as per the service schedule or which have not been operated or maintained in accordance with instructions mentioned in the Owner's Manual.
15. The vehicles used for any competition or race and/or for attempting to set up any kind of record HMSI reserves the right to make any changes in design or to add any improvement on the vehicle at any time without incurring any obligations to install the same on a vehicle previously supplied and sold. Also the conditions of this warranty are subject to alteration without any notice.

This warranty is entirely written warranty given by HMSI for “H’ness CB350” and no other person, including the dealer or its or his agent or employee is authorised to extend or enlarge this warranty.

This warranty is given in lieu of and excludes every condition or warranty whether statutory or otherwise not herein expressly set out.

EMISSION WARRANTY 排放保證

Subject to other terms of the warranty policy and other conditions and obligations laid down hereunder, the manufacturer certifies that the components liable to affect the emission of the gaseous pollutants in the vehicle in normal use despite the use to which it may be subjected, comply with provisions of rule 115(2) of the Central Motor Vehicle Rules, 1989 and further warrants that if on examination by a service center duly authorized by the manufacturer, the vehicle is discovered to be failing to meet the emission standard as specified in the said rule,

the authorized service center shall take such corrective measures as may be necessary and shall at its sole discretion replace free of charge such components of emission control system as are specified in schedule.

A. Conditions

1. This warranty will be in addition to and run parallel to the product warranty given by the manufacturer and will apply to components as mentioned later. This warranty is applicable in Delhi, Mumbai, Kolkata and Chennai with effective from 1st July 2001. Other places when included will be covered under warranty accordingly.
2. The period of the vehicle’s emission warranty will be determined starting from the date of the vehicle sale. The period of time and kilometers that are covered under the provisions of warranty may vary but should not be less than the minimum warranty period based on the vehicle category.

For a two-wheeler the emission warranty period is 30,000 kms or 3 years whichever is earlier.

Warranty Policy (Valid in India Only)

3. Warranty claim for the components under Emission warranty will be admitted, for a prima facie examination, in the event of failure of the vehicle to meet the emission standard as specified in sub-rule (2) of Rule No 115 of the Central Motor vehicle Rules.
4. The warranty claim will be accepted only after the examinations carried out by Authorized Service Centers leads to a firm conclusion that none of the original settings have been tampered with and that the components has/have a manufacturing defect, and/or, that the vehicle is unable to meet the in-use emission standard, in spite of the vehicle being maintained and used in accordance with the instructions in the owner's manual.
5. The methods of examination to determine the warrantable condition of the components will be at the sole discretion of manufacturers and or their Authorized service centers and results of such examination will be final and binding. If, on examination, a warrantable condition is not established, the manufacturers will have to charge all, or part, of the cost of such examination.
6. In case of a vehicle in which the components covered under Emission warranty, the manufacturer will replace, at Authorized centers free of charge, the components which are covered, but the consumables as mentioned in Owner's Manual shall be charged as per actuals.
7. In case of a vehicle in which the components covered under Emission warranty or the associated parts are not independently replaceable on account of their being integral parts of a complete assembly, the manufacturer will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.

8. Any consequential repairs or replacement of parts which may be found necessary to establish compliance to in-use emission standards, in addition to replacement of the parts covered under emission warranty, will not be made free of cost unless such parts are also found to be in a warrantable condition within the scope and limit of the product warranty. The consumables shall be charged as per actual during such repairs or replacement of parts.
9. All the parts removed for replacement under warranty will be the property of the manufacturer.
10. The manufacturer will not be responsible for the cost of transportation of the vehicle to the nearest Authorized Service center or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination by the manufacturer and repairs.
11. The manufacturer will not be responsible for any penalties that may be charged by statutory authorities on account of failure to comply with the in use emission standards.
12. Emission warranty will be applicable irrespective of the change of ownership of the vehicle provided all the conditions as laid down in this document are met from the date of original sale of the vehicle.
13. The emission warranty will be applicable only if:
 - a. Observes all the important instructions and any other precautions listed in the Owner's Manual for use of the vehicle.
 - b. Under all circumstances uses lubricants and fuel as recommended by manufacturer.
 - c. Regularly obtains and carries out maintenance in accordance with the manufacturers guidelines and enters the details in the Logbook.
 - d. Immediately approaches the nearest authorized service center upon discovery of failure to comply with the

Warranty Policy (Valid in India Only)

in use emission standards in spite of having maintained and used the vehicle in accordance with the instructions in the Owner's Manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.

- e. Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate, or pursuant upon being directed by an officer as referred to in sub-rule(2) of Rule 116 of the Central Motor Vehicle Rules.
- f. Produces the Owner's Manual and Log book for verification details.
- g. Produces receipts covering maintenance of the vehicle as specified in the Owner's Manual from the date of original purchase of the vehicle.

h. Produces valid certificate of insurance and RTO registration.

14. Conditions under which warranty is not applicable:

A valid 'Pollution Under Control' certificate as described in customer obligation D(6) above is not produced.

A vehicle which is not serviced by Authorized service center as per the service schedule described in the maintenance chart given in the Owner's Manual.

A vehicle, which has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident. Use of replacement parts not specified and approved by the manufacturer.

A vehicle, or parts thereof, which has been altered, tampered with or modified or replaced in an unauthorized manner.

A vehicle on which the odometer is not functioning or the odometer has been changed/tampered with so that the actual mileage cannot be readily determined.

A vehicle which has been used for competitions, races, rallies or for the purpose of establishing records.

Examination by the manufacturers or his Authorized Service Centers of the vehicle shows that any of the conditions stipulated in the Owner's Manual with regard to use and maintenance have been violated.

A vehicle, which has been run on, adulterated fuel, leaded fuel or lubricant or fuel/lubricants other than those specified by the manufacturer in the Owner's Manual with regard to use and maintenance have been violated.

SCOPE AND LIMITS 範圍和限制

1. This emission warranty is in addition to product warranty and shall run parallel to the product warranty for the vehicle as per the scope and limit described in the Owner's Manual and all conditions described there in will apply in addition to those exclusively stipulated in this warranty.

2. The emission warranty covers only compliance with the emission standard as specified in the sub rule (2) of rule 115 of CMVR. It does not cover any other performance of these parts or routine test and consequent maintenance or adjustments to establish compliance to the in use emission standard as applicable to the state, in which the vehicle is registered and is in use.

The parts, which are covered under emission warranty, are throttle body, fuel injector, ignition coil, muffler etc.

NOTE: The emission warranty is applicable only when a customer enters into emission warranty contract.

A	
ABS (Anti-lock Brake System)	10
ABS (Anti-lock Brake System) Indicator.....	29, 89
Accessories.....	14
Air Cleaner	61
B	
Battery.....	53, 63
Bluetooth Pairing.....	27
Brakes	
Brake Light Switch.....	75
Fluid.....	73
Pad Wear.....	74
Braking	9
Bulb	
Brake/Tail Light.....	101
Front Turn Signal.....	101
Headlight.....	101
License Plate Light.....	101
Rear Turn Signal.....	101
C	
Caring for Your Vehicle.....	108
Catalytic Converter	116
Clock.....	24
Clutch	81
Crankcase Breather.....	84
D	
Drive Chain	57, 77
Drive Chain Slider	80
E	
Electrical Trouble.....	100
Engine	
Number.....	114
Oil.....	56, 69, 118
Starting	39
Engine Stop Switch	33, 107
Environment	113
Equipment	
Document Bag.....	45, 107
First Aid Kit.....	45
Owner's Manual	107
Tool Kit.....	46, 62
F	
Frame Number.....	114

Fuel	
Gauge.....	19
Recommended	42
Remaining	19
Tank Capacity.....	42
Fuels Containing Alcohol	115
Fuses	55, 119
G	
Gasohol.....	115
H	
Hazard Switch	33
Headlight Aim	85
Headlight Dimmer Switch.....	33
Helmet Holder	44
High Beam Indicator	30
Honda Selectable Torque Control (HSTC).....	13, 38
Honda Smartphone Voice Control system.....	35
Horn Button.....	33
HSTC Button.....	18

I	
Ignition Cut-off System.....	107
Ignition Key	106
Ignition Switch	33, 107
Image Labels	6
Indicators.....	29
Instruments.....	18
Instruments, Controls, & Other Features	107
K	
Keys.....	106
L	
Load Limits	15
Loading Guidelines	15
M	
Maintenance	
Fundamentals.....	49
Importance	48
Safety.....	48
Schedule.....	49
Maximum Weight Limit.....	15, 117
Modifications.....	14

N	
Neutral Indicator.....	29
O	
Odometer.....	19, 107
Oil	
Engine.....	56, 69, 118
P	
Parking.....	11
Parts Location.....	16
Passing Light Control Switch.....	33
Petrol.....	42, 117
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	29, 89
Protective Apparel.....	8
R	
Recommended	
Engine Oil.....	56
Fuel.....	42
Refueling.....	42
Removal	
Battery.....	63
Left Side Cover.....	64
Right Side Cover.....	65
Seat.....	66
Riding Precautions.....	9
S	
Safety Guidelines.....	3
Safety Precautions.....	8
Seat.....	66
SEL button.....	18
Serial Numbers.....	114
SET button.....	18
Shifting Gears.....	41
Side Stand.....	76
Smartphone Pairing Trouble.....	98
Spark Plug.....	67
Specifications.....	117
Speedometer.....	18
Start Button.....	33
Starting the Engine.....	39
Steering Lock.....	34
Storage Equipment.....	44

Storing Your Vehicle.....	111
Switches.....	33
T	
Throttle.....	83
Tool.....	62
Torque Control Indicator.....	30, 90
Transporting Your Vehicle.....	112
Tripmeter.....	23, 107
Troubleshooting.....	87
Turn signal indicators.....	29
Turn signal Switch.....	33
Tyres	
Air Pressure.....	59, 118
Puncture.....	92
Replacing.....	59, 92
U	
USB Socket.....	43

W

Warning Indicator On or Flashing.....	89
Warranty Policy.....	120
Washing Your Vehicle.....	108
Weight Limit.....	15
Wheels	
Front Removal.....	93
Rear Removal.....	95